




**OWNER'S
MANUAL**

**Model 760 Powermaster
.177 Cal. BB Repeater/Single
Shot .177 Cal. Pellet Rifle.**

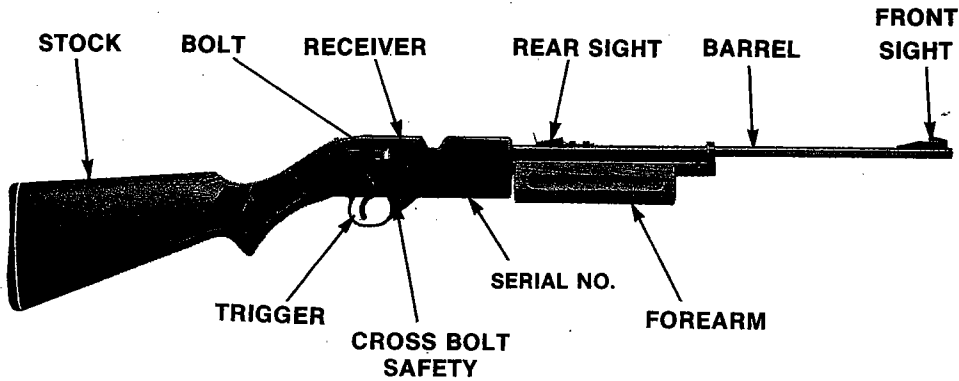

A  Division

BE CAREFUL - BE A SAFESHOOTER

CAUTION: THIS AIR GUN IS NOT A TOY AND MAY CAUSE DEATH OR SERIOUS INJURY, PARTICULARLY TO THE EYE, IF MISUSED OR USED CARELESSLY. READ ALL INSTRUCTIONS BEFORE USING. THIS AIR GUN REQUIRES ADULT SUPERVISION IF THE USER IS UNDER 16 YEARS OLD AND SHOULD NOT BE USED BY ANYONE UNDER 8 YEARS OF AGE. PURCHASER AND USER HAVE THE RESPONSIBILITY TO CONFORM TO ALL LAWS CONCERNING THE USE AND OWNERSHIP OF THIS AIR GUN.

BE CAREFUL - BE A SAFESHOOTER

SPECIFICATIONS

Mechanism	Bolt-action		
Caliber	.177		
Ammunition	.177 cal. Crosman Super Pells® or Crosman Super BBs®		
Reservoir	180 BBs		
Magazine	18 BBs		
Weight	4 lbs. 6 oz. (1.9kg)		
Overall Length	36 in. (914mm)		
Sights: Rear	Fully adjustable for elevation and windage		
Front	Blade type		
Barrel	19 in. (483mm) solid steel, smooth bore		
Stock/Forearm	High impact plastic		
Power Source	Short stroke, pneumatic pump action		

PERFORMANCE

Pumps	(Average)		Projectile	Weight
	Muzzle Velocity			
	Above			
3	400 f.p.s.		.177 BB	5.42 gr.
6	500 f.p.s.		.177 BB	5.42 gr.
10	595 f.p.s.		.177 BB	5.42 gr.
3	380 f.p.s.		.177 Pell	8.2 gr.
6	470 f.p.s.		.177 Pell	8.2 gr.
10	540 f.p.s.		.177 Pell	8.2 gr.

HOW TO OPERATE

IMPORTANT: Steps for safe and satisfactory operation.


- Step 1 Put rifle "ON SAFE"
- Step 2 Pump rifle
- Step 3 Load rifle
- Step 4 Aim and Fire

BE CAREFUL - BE A SAFESHOOTER

Step 1 HOW TO PUT RIFLE "ON SAFE"

This rifle has a Cross-Bolt Safety. Push from the left side; it will stop your Trigger from moving. Safe and Fire are clearly marked on the sides of the Trigger Guard, see (Fig. 1).

CAUTION: It is your duty to keep the rifle on "Safe" at all times until you are ready to shoot, then put safety in "off" position.

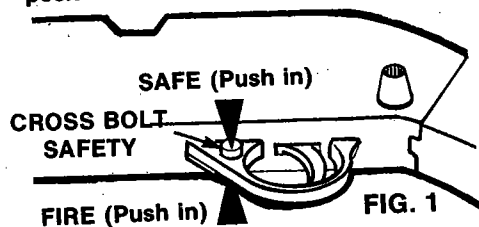


Step 2 HOW TO PUMP RIFLE

See (Fig. 2) for correct way to pump your rifle.

CAUTION: Velocity produced by more than 10 pumps is only minor and can cause damage to the pump mechanism. Do Not pump your rifle more than 10 times.

Warning: Do Not shoot rifle with less than two (2) pumps. If you do, you will jam your gun.

CAUTION: Avoid pinching hand between Pumping Lever and Tube

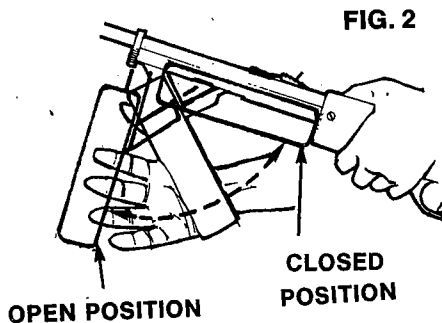

Step 3 HOW TO LOAD YOUR 760 RIFLE WITH BBs:

Put gun "ON SAFE"

- A. Rotate the Loading Port Cover to the right and fill Reservoir with 180 BBs (Fig. 3). Close cover to the left.
- B. To transfer BBs from Reservoir to Visual Magazine, grip rifle as illustrated in Fig. 4, move the BB Retainer Button rearward with thumb, then with a hand twisting motion BBs will flow into Visual Magazine. When the Visual Magazine is filled move the BB Retainer Button forward.

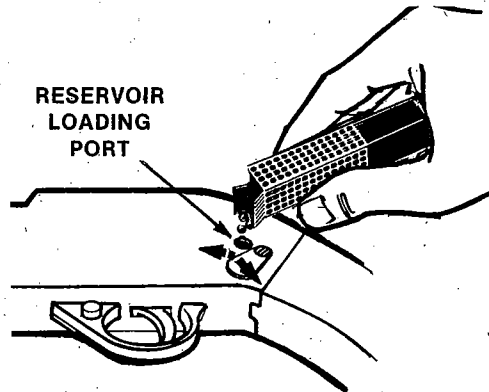


FIG. 3

WARNING: Pellets should never be put into the BB Loading Port. They will jam your rifle.

BE CAREFUL - BE A SAFESHOOTER

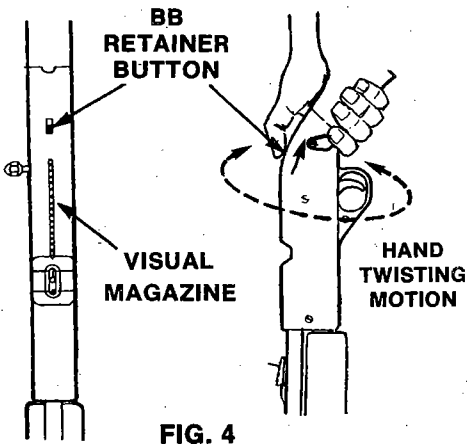


FIG. 4

- C. To empty the Visual Magazine, hold the rifle straight up. Move the BB Retainer Button rearward with thumb, then with a hand twisting motion BBs will flow back into Reservoir. Make sure Visual Magazine is empty before moving BB Retainer Button forward.

How To Load Your 760 Rifle with Pellets:

- A. Put gun "ON SAFE"
- B. To prevent Barrel jamming, all BBs must be removed from Visual Magazine. See Step 3 Section C (Fig. 4)

To load a SUPER PELL, lift the Bolt and pull it back fully. Place SUPER PELL, nose forward in the Receiver Loading Recess (Fig. 5) Push the Bolt forward and down to lock.


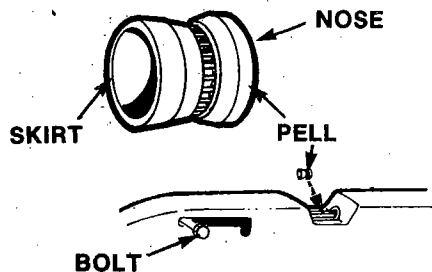


FIG. 5

Step 4 HOW TO AIM AND FIRE

Put the gun "ON SAFE", point the rifle slightly downward. Lift the Bolt and pull it back fully. Push the Bolt forward and down to lock (Fig. 6). The Magnetic Bolt picks a BB from the Visual Magazine and transfers it into the Barrel Chamber.

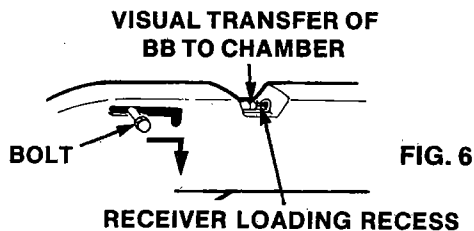


Take aim, push "OFF SAFE" and squeeze the Trigger to fire.

CAUTION: Never attempt to discharge rifle with Bolt in unlocked position.

How to Remove a Jammed Pellet or BB

CAUTION: Do Not Reload. Put gun "ON SAFE" unload all the BBs from Visual Magazine into Reservoir. Pump gun ten times, cock gun by operating Bolt (see step 4) take gun "OFF SAFE" point in Safe direction and fire. If gun remains jammed do the following:


- A. Operate Bolt and leave open.
- B. Insert a straightened clothes hanger or metal rod into Muzzle end of Barrel.
- C. Carefully push the jammed BB or Pellet out into the Receiver Loading Recess and discard. (Fig. 7).

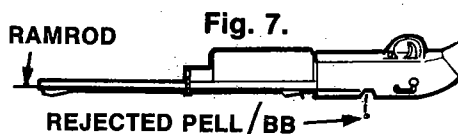

IMPORTANT: If unable to unjam gun see REPAIR SERVICE section of this manual.


HOW TO SIGHT IN RIFLE

The rifle is correctly aimed when the blade of the Front Sight is positioned exactly in the notch of the Rear Sight, and the top of the Front Sight is flush with the top of the Rear Sight. For target shooting, many marksmen prefer to

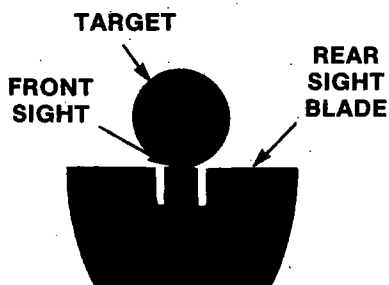

sight-in at the bottom of the bull's eye (the 6 o'clock position) (Fig. 8). The sights will then appear black against the white of the target. The point of impact, however, will be the center of the bull's eye.

The Rear Sight may be adjusted for Elevation and if necessary, Windage. (Fig. 9).

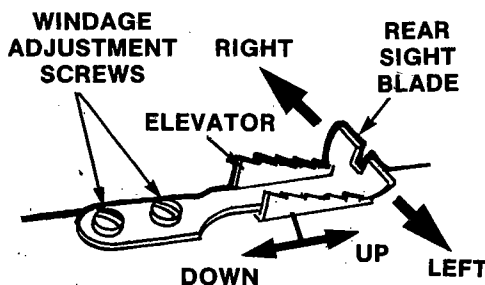

BE CAREFUL - BE A SAFESHOOTER


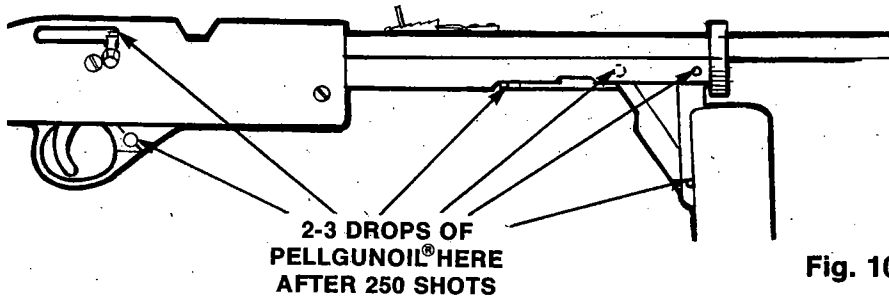


Fig. 10.

LUBRICATION

Follow these simple instructions to insure the long life of your rifle. After every 250 shots apply 2 or 3 drops of Crosman PELLGUNOIL to the Pump Cup and Piston Assembly (Fig. 10): It is not necessary to clean the Barrel Bore, but the occasional application of a

little PELLGUNOIL is recommended to prevent the Barrel from rusting. Crosman PELLGUNOIL is recommended. Use only 2-3 drops. PELLGUNOIL is best, but any household oil is better than no oil at all. This is very important.

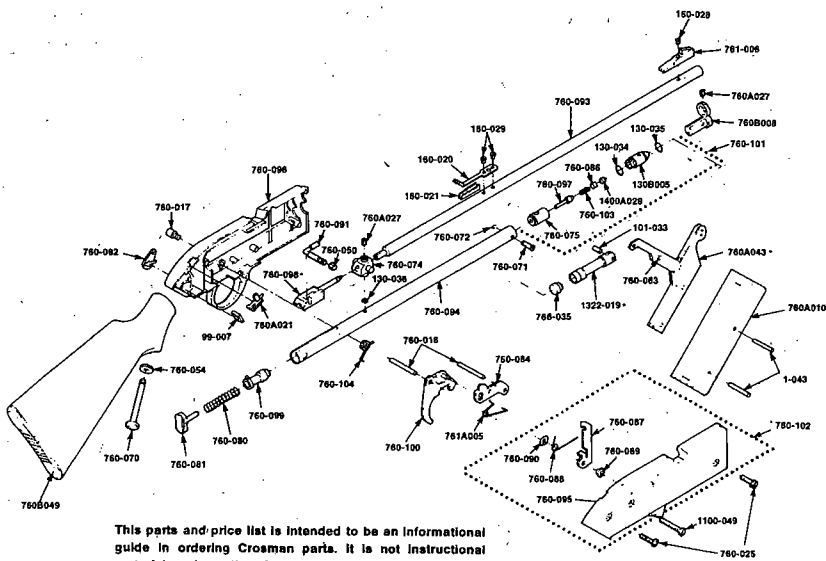

This parts and price list is intended to be an informational guide in ordering Crosman parts. It is not instructional material and we therefore assume no responsibility for those who use same without proper factory training.

Model 760 Assemblies and Parts List

PART NO.	QTY.	DESCRIPTION	PRICE	PART NO.	QTY.	PART NAME	PRICE
M1-043	2	Forearm Pin	.15	760-081	1	Tube Plug	.15
99-007	1	Square Nut	.10	760-082	1	Port Cover	.20
101-033	1	Plunger Guide Pin	.15	760-084	1	Sear	.35
130B005	1	Check Valve Body	.90	760-085	1	Valve Spacer	.10
130-034	1	O Ring	.10	760-087	1	Interlock	.45
130-035	1	O Ring	.10	760-088	1	Interlock Spring	.10
130-036	1	Breath Gasket	.15	760-089	1	Interlock Bushing	.10
160-020	1	Rear Sight	.25	760-090	1	Interlock Retainer	.10
160-021	1	Elevator	.15	760-091	1	Bolt Lever	.55
160-028	1	Front Sight Screw	.15	760-093	1	Barrel	6.20
160-029	2	Rear Sight Screw	.10	760-094	1	Pump Tube	4.60
760B008	1	Front Barrel Guide	1.20	760-095	1	Receiver, RH	5.35
760A010	1	Forearm	3.25	760-096	1	Receiver, LH	4.00
760-016	2	Trigger Pivot Pin	.30	760-097	1	Valve Stem Assy.	.95
760-017	1	Safety	.20	760-098	1	Bolt Assy.	1.60
760A021	1	BB Retainer	.10	760-099	1	Hammer Assy.	1.30
760-025	2	Receiver Screw	.15	760-100	1	Trigger Assy.	1.05
760A027	2	Set Screw	.30	760-101	1	Valve Assy.	4.10
760A043	1	Lever/Link Assy.	2.15	760-102	1	R.H. Receiver Assy.	6.15
760B049	1	Stock Assy.	7.00	760-103	1	Check Valve Spring	.10
760-050	1	Bolt Knob	.30	760-104	1	Trigger Return Spring	.10
760-054	1	Lock Washer	.10	761A005	1	Trigger Spring	.15
760-063	1	Detent Plug	.10	761-006	1	Front Sight	.20
760-070	1	Stock Screw	.25	768-035	1	Pump Cup	.45
760-071	1	Pivot Pin	.55	1100-048	1	Receiver Screw	.10
760-072	1	Pivot Pin Retainer	.10	1322-019	1	Connecting Rod Assy.	1.70
760-074	1	Barrel Support	1.20	1400A029	1	Check Valve	.25
760-075	1	Valve Body	.90			Exploded View and Parts List...	\$1.60
760-080	1	Hammer Spring	.10				

Minimum parts order \$1.00. (Order by part number and name). Prices subject to change without notice. Check or money order in amount of total purchase must accompany parts order. Parts will be shipped prepaid.

CAUTION

You must do the following things to insure safe and satisfactory performance of your gun.

- DON'T** forget to treat every gun as if it were loaded.
- DON'T** point the rifle in an unsafe direction.
- DON'T** use your rifle without due respect for yourself, and other people.
- DON'T** shoot at the target until you are sure of your backstop.
- DON'T** conduct yourself in an un-sportsmanlike manner when using your rifle.
- DON'T** store your rifle loaded.
- DON'T** shoot your rifle with less than 2 pumps.
- DON'T** reuse ammunition that has already been fired.
- DON'T** alter or adjust any of the factory settings to your rifle.
- DON'T** pump the gun while your finger is on the Trigger.
- DON'T** forget to check Safety Bolt before loading and pumping.
- DON'T** over pump your rifle (more than 10 pumps).

BE CAREFUL - BE A SAFESHOTTER

REPAIR SERVICE

If your gun needs repair, we recommend you take or send it to your nearest Crosman Authorized Service Center, (list of service centers in box with gun). Your gun requires special tools and fixtures to repair, and if you take it apart, you probably will not be able to reassemble it correctly. Crosman assumes no warranty responsibility in this case.

A SPECIAL CUSTOMER SERVICE

Crosman Authorized Service Center will unjam your gun at no cost, During Warranty period.

BE CAREFUL - BE A SAFESHOOTER

LIMITED 90 DAY WARRANTY

This product is warranted to the retail consumer for 90 days from date of retail purchase against defects in material and workmanship and is transferable. To register the serial number of your gun, please return the Customer Information Card. The warranty is not conditioned on the return of the information card.

WHAT IS COVERED

Replacement parts and labor. Transportation charges to Consumer for repaired product.

WHAT IS NOT COVERED

Transportation charges to Crosman for defective product. Damages caused by abuse or failure to perform normal maintenance--see owner's manual. Sales outside of the United States. Any other expense. CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

HOW TO OBTAIN WARRANTY PERFORMANCE

Locate nearest Crosman Service Center on list with Product or in phonebook. In California, call 714/523-0072 if no listing. Attach to Product your name, address, description of problem, phone number and proof of date of retail purchase (sales slip). Package and return Product to Crosman Service Center, transportation charges prepaid.

IMPLIED WARRANTIES

ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE YEAR FROM DATE OF RETAIL PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

To the extent any provision of this warranty is prohibited by federal, state, or municipal law and cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.