




MODEL 760XL POWERMASTER

**OWNER'S
MANUAL**

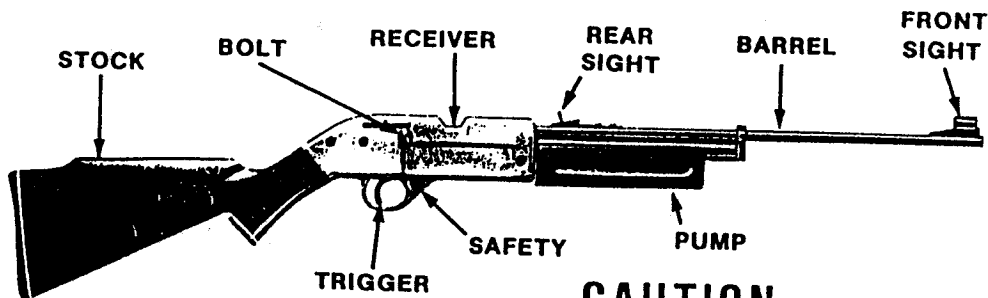

**CAUTION: WEAR SAFETY
GLASSES WHEN SHOOTING.**



**IMPORTANT
READ BEFORE USING RIFLE
BE CAREFUL - BE A SAFE SHOOTER**

SPECIFICATIONS

- Mechanism Bolt-Action
- Caliber .177
- Ammunition .177 Cal Crosman Super
Pells® or Crosman Super
BBs®
- Reservoir 180 BBs
- Magazine 18 BBs
- Weight 4 lbs. 11 oz. (2.13 kg.)
- Overall Length 36 in. (914 mm)
- Sights: Rear Fully adjustable for elevation
and windage
- Front Hooded blade type
- Barrel 19 in. (483 mm) solid steel
button rifled, 10 lands, right
hand twist, one turn in 16 in.
(406 mm)
- Stock/Forearm High impact plastic
- Power Source Short stroke, pneumatic pump
action

PERFORMANCE

(Average)			
Pumps	Muzzle Velocity	Projectile	Weight
3	400 f.p.s.	.177 BB	5.42 gr.
6	500 f.p.s.	.177 BB	5.42 gr.
10	595 f.p.s.	.177 BB	5.42 gr.
3	380 f.p.s.	.177 PELL	8.2 gr.
6	470 f.p.s.	.177 PELL	8.2 gr.
10	540 f.p.s.	.177 PELL	8.2 gr.

SHOOTING SAFETY ZONES

(Distance that a BB or Pellet may travel)

ZONE A 2 TO 4 PUMPS

**YOU NEED A CLEAR
VIEW FOR 250 YARDS
(2½ FOOTBALL FIELDS)**

ZONE B 5 TO 10 PUMPS

**YOU NEED A CLEAR VIEW
FOR 450 YARDS
(4½ FOOTBALL FIELDS)**

ZONE C

**DO NOT OPERATE RIFLE
OVER 10 PUMPS.**

WARNING: THIS AIR GUN IS NOT A TOY AND MAY CAUSE DEATH OR SERIOUS INJURY, PARTICULARLY TO THE EYE, IF MISUSED OR USED CARELESSLY. MAY BE DANGEROUS UP TO 450 YARDS (412 METERS). READ ALL INSTRUCTIONS BEFORE USING.
THIS AIR GUN REQUIRES ADULT

SUPERVISION IF THE USER IS UNDER 16 YEARS OLD AND SHOULD NOT BE USED BY ANYONE UNDER 8 YEARS OF AGE. PURCHASER AND USER HAVE THE RESPONSIBILITY TO CONFORM TO ALL LAWS CONCERNING THE USE AND OWNERSHIP OF THIS AIR GUN.

BE CAREFUL - BE A SAFE SHOOTER


HOW TO OPERATE

IMPORTANT: Steps for SAFE and satisfactory operation.

- STEP 1 HOW TO PUT RIFLE ON "SAFE". (SEE PAGE 3).
- STEP 2 LOAD BB RESERVOIR/MAGAZINE (SEE PAGE 4).
- STEP 3 TO PUMP RIFLE. (SEE PAGE 5).
- STEP 4 TO COCK AND LOAD RIFLE. (SEE PAGE 6 & 7).
- STEP 5 AIM, SIGHT AND FIRE (SEE PAGE 8, 9 & 10).

STEP 1 HOW TO PUT RIFLE ON "SAFE"

This rifle has a Safety. It will stop your rifle from shooting. (See Fig. 1).

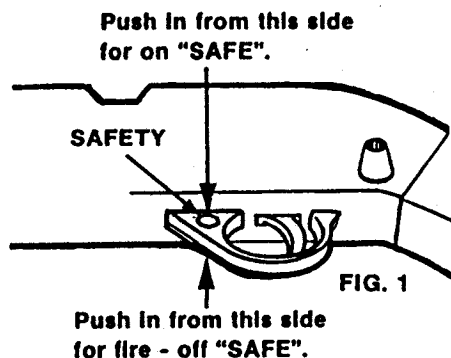


CAUTION: KEEP THE RIFLE ON "SAFE" AT ALL TIMES UNTIL YOU ARE READY TO SHOOT.

BE CAREFUL - BE A SAFE SHOOTER

3

STEP 2 LOAD BB RESERVOIR/MAGAZINE

- A. Put gun on "SAFE"
- B. Open Loading Port. Load with BBs - up to 180. Close Loading Port. (Fig. 2).

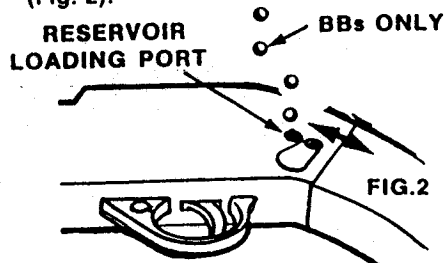


WARNING: DO NOT LOAD PELLETS IN BB PORT. IT WILL JAM YOUR GUN.

- C. To transfer BBs into Visual Magazine:
 - 1. Pull BB Retainer Button back.

- 2. Shake and twist rifle as shown in (Fig. 3).
- 3. Push BB Retainer Button forward.

CAUTION: IF BB RETAINER IS NOT PUSHED FORWARD YOU MAY ACCIDENTALLY LOAD THE MAGAZINE FROM THE RESERVOIR.

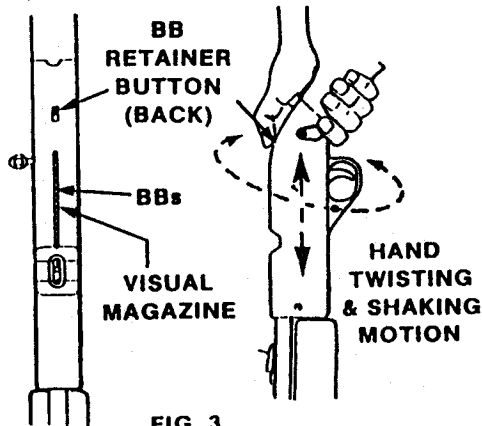

4

FIG. 3

D. To empty BBs from Visual Magazine:

1. Pull Retainer Button back.
2. Point rifle up, shake and twist.
3. Make sure Visual Magazine is empty. (See Fig. 3)
4. Push Retainer Button forward.

STEP 3 TO PUMP RIFLE


- A. Make sure gun is on "SAFE".
- B. Keep Barrel pointed in a safe direction.

WARNING: DO NOT PUMP YOUR RIFLE MORE THAN 10 TIMES. MORE THAN 10 PUMPS IS NOT SAFE. AIR CAN BE LEFT AFTER YOU SHOOT. A BB CAN COME OUT IF YOU SHOOT AGAIN EVEN WITHOUT PUMPING.

WARNING: DO NOT SHOOT RIFLE WITH LESS THAN TWO (2) PUMPS. IT MAY JAM YOUR GUN.

- C. See (Fig. 4) for correct way to pump your rifle.

CAUTION: DON'T PINCH HAND BETWEEN PUMPING LEVER AND TUBE.

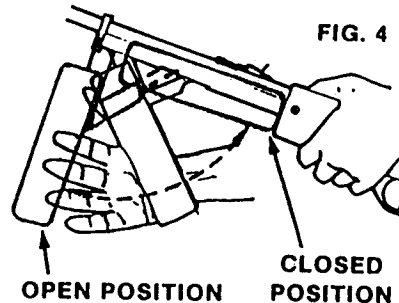

BE CAREFUL - BE A SAFE SHOOTER

5


STEP 4 TO COCK AND LOAD WITH BBs

- A. Make sure gun is on "SAFE".
- B. Point the rifle in a SAFE DIRECTION with the barrel pointing down. Lift the Bolt and pull it back. This will cock your gun and pick up a BB from the Visual Magazine (Fig. 5). Push the Bolt forward gently and down to lock.

NOTE: IF GUN IS POINTED UPWARD, BBs MAY NOT GO INTO CHAMBER.

- C. Your rifle is now ready to fire. (See Step 5 for How To Aim and Fire).

You can see BB going into Chamber

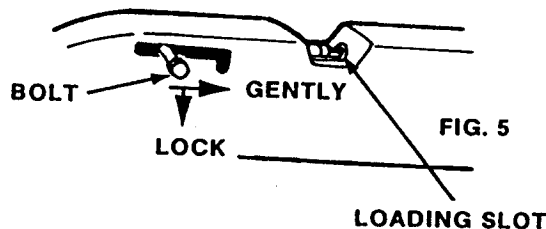

6

BE CAREFUL - BE A SAFE SHOOTER


STEP 4 TO COCK AND LOAD WITH PELLETS

- A. Put gun on "SAFE".
- B. Make sure no BBs are in Visual Magazine. (See Step 2, Section D). They will jam your gun if shot with pellets.
- C. Point the rifle in a safe direction. Lift the Bolt and pull it back fully. Place Super Pell, nose forward in Loading Slot. (Fig. 6). Push the Bolt gently forward and down to lock.

- D. Your rifle is now ready to fire. (See Step 5 for How to Aim and Fire).

WARNING: ALWAYS KEEP RIFLE ON "SAFE" AND POINTED IN A SAFE DIRECTION UNTIL READY TO AIM AND FIRE.

WARNING: EVEN IF THE GUN LOOKS EMPTY OF BBs OF PELLETS, THERE MAY BE ONE LEFT IN THE BARREL.

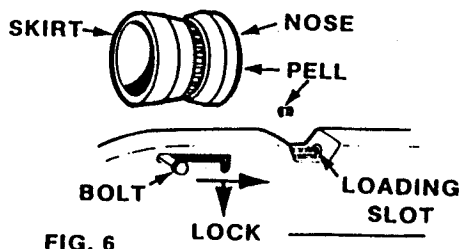

CAUTION: NEVER FIRE RIFLE WITH BOLT IN UNLOCKED POSITION.

BE CAREFUL - BE A SAFE SHOOTER

7

STEP 5 AIM, SIGHT AND FIRE

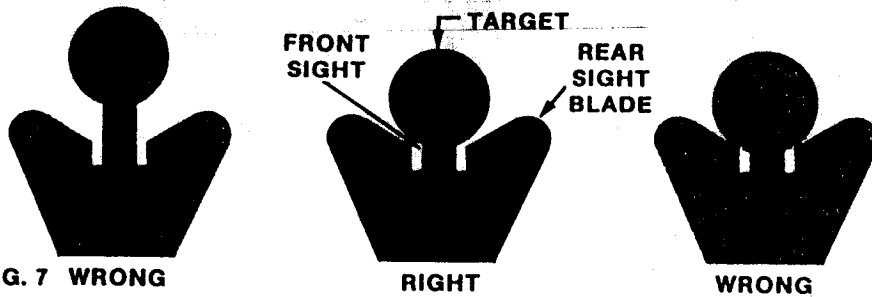


FIG. 7 WRONG

RIGHT

WRONG

A. How to Aim

1. Make sure gun is on "SAFE".
2. Line up front and rear sights so they look like the center picture (Fig. 7).

B. How To Fire

1. When you are sure of your backstop, take off "SAFE". Aim and squeeze Trigger to fire.


CAUTION: DO NOT SHOOT IF ANYONE IS WITHIN 25 FEET OF EITHER SIDE OF TARGET.

8 BE CAREFUL - BE A SAFE SHOOTER

C. How to Sight In


1. Gun shoots too low.

FIG. 8

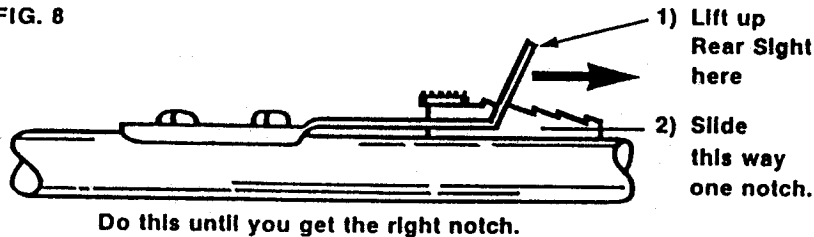

2. Gun Shoots Too High.

FIG. 9

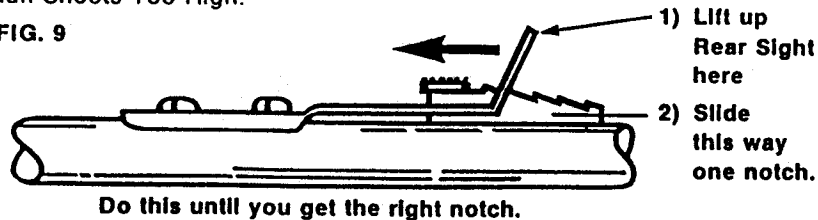


BE CAREFUL - BE A SAFE SHOOTER

9


3. Gun Shoots to the Left.

FIG. 10

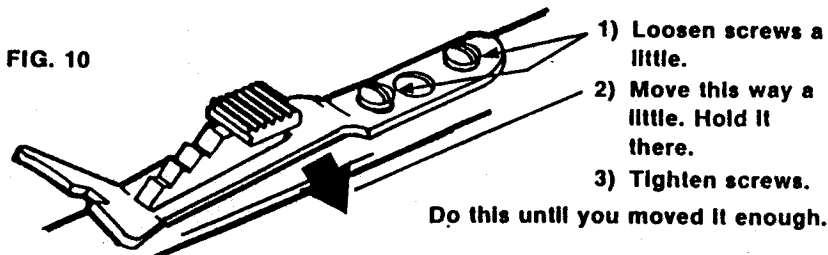

4. Gun Shoots to the Right

FIG. 11

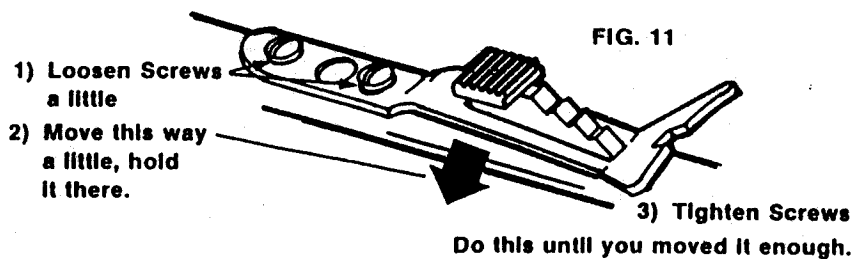

10

BE CAREFUL - BE A SAFE SHOOTER

NOTE: IF PELLET OR BB FAILS TO LEAVE RIFLE WHEN FIRED, YOUR GUN IS JAMMED.

REASONS FOR A JAMMED GUN:


- A. Reused or defective ammunition.
- B. Shooting BBs and Pellets together.
- C. Shooting BBs/Pellets with less than two (2) pumps.
- D. Loading Pellets backwards.
- E. Low pressure due to lack of proper lubrication.

HOW TO REMOVE A JAMMED PELLET OR BB

CAUTION: DO NOT RELOAD

Put gun on "SAFE" unload all BBs from Visual Magazine into Reservoir (see Step 2 Section D). Pump rifle ten (10) times, cock rifle by operating Bolt, (see Step 4). Point in SAFE DIRECTION, take gun off "SAFE", and fire. If rifle remains jammed do the following.

- A. Put rifle on "SAFE".
- B. Operate Bolt and leave open.
- C. Insert a straightened clothes hanger or metal rod into Muzzle end of Barrel.
- D. Carefully push the jammed BB or Pellet out into the Receiver Loading Chamber and discard. (Fig. 12).

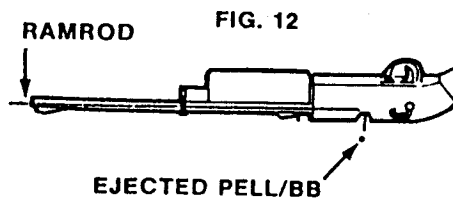

IMPORTANT: If unable to unjam gun see REPAIR SERVICE section of this manual. (Page 19).

11

LUBRICATION


Follow these simple instructions to insure the long life of your rifle. After every 250 shots apply 2 or 3 drops of Crosman PELLGUNOIL to the Pump Cup and Piston Assembly (Fig. 13).

It is not necessary to clean the Barrel Bore, but the occasional application of a little PELLGUNOIL is recommended to

prevent the Barrel from rusting. Crosman PELLGUNOIL is recommended. Use only 2-3 drops. PELLGUNOIL is best, but any household oil is better than no oil at all. This is very important.

IMPORTANT: Both power and long life of your gun depend on regular oiling.

FIG. 13

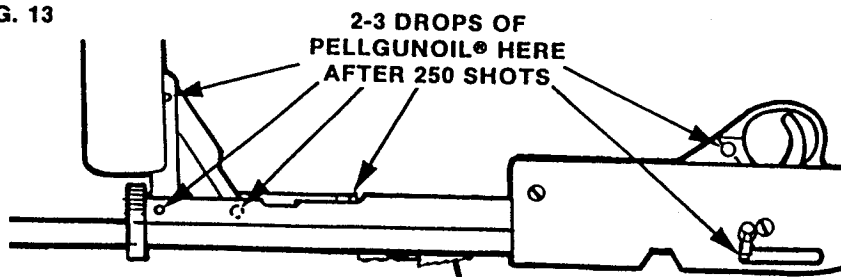

12

BE CAREFUL - BE A SAFE SHOOTER

WARNING

You must do the following things to insure safe and satisfactory performance of your gun.

- DON'T forget to treat every gun as if it were loaded.
- DON'T point your rifle in an unsafe direction or at anything you should not shoot.
- DON'T use your rifle without due respect for yourself and other people.
- DON'T shoot at the target until you are sure of your backstop.
- DON'T conduct yourself in an unsportsmanlike manner when using your rifle.
- DON'T store your rifle loaded.
- DON'T shoot your gun if you drop it. Make sure it works O.K. first.
- DON'T shoot rifle with less than two pumps.
- DON'T forget to check your gun to see if it is loaded when taken from storage.
- DON'T reuse ammunition that has already been fired.
- DON'T alter or adjust any of the factory settings to your rifle.
- DON'T pump the gun while your finger is on the Trigger.
- DON'T forget to check Safety before loading and pumping.
- DON'T overpump your rifle (more than 10 pumps).
- DON'T use your gun if any settings change such as Trigger travel or pull. Have it checked by a Repair Station to find out why.

BE CAREFUL - BE A SAFE SHOOTER

13

LIMITED 90 DAY WARRANTY

This product is warranted to the retail consumer for 90 days from date of retail purchase against defects in material and workmanship and is transferable. To register the serial number of your gun, please return the Warranty Record Card. The warranty is not conditioned on the return of the record card.

WHAT IS COVERED

Replacement parts and labor. Transportation charges to Consumer for repaired product.

WHAT IS NOT COVERED

Transportation charges to Crosman for defective product. Damages caused by abuse or failure to perform normal maintenance--see owner's manual. Sales outside of the United States. Any other expense. CONSEQUENTIAL DAMAGES, INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Printed in U.S.A. Model No. 788-503

HOW TO OBTAIN WARRANTY PERFORMANCE

Locate nearest Crosman Service Center on list with Product or in phonebook. In California, call 714/523-0072 if no listing. Attach to Product your name, address, description of problem, phone number and proof of date of retail purchase (sales slip). Package and return Product to Crosman Service Center, transportation charges prepaid.

IMPLIED WARRANTIES

ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO ONE YEAR FROM DATE OF RETAIL PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

To the extent any provision of this warranty is prohibited by federal, state, or municipal law and cannot be preempted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. 7E8