




**Crossman**



SlideMaster

3500

Owner's Manual

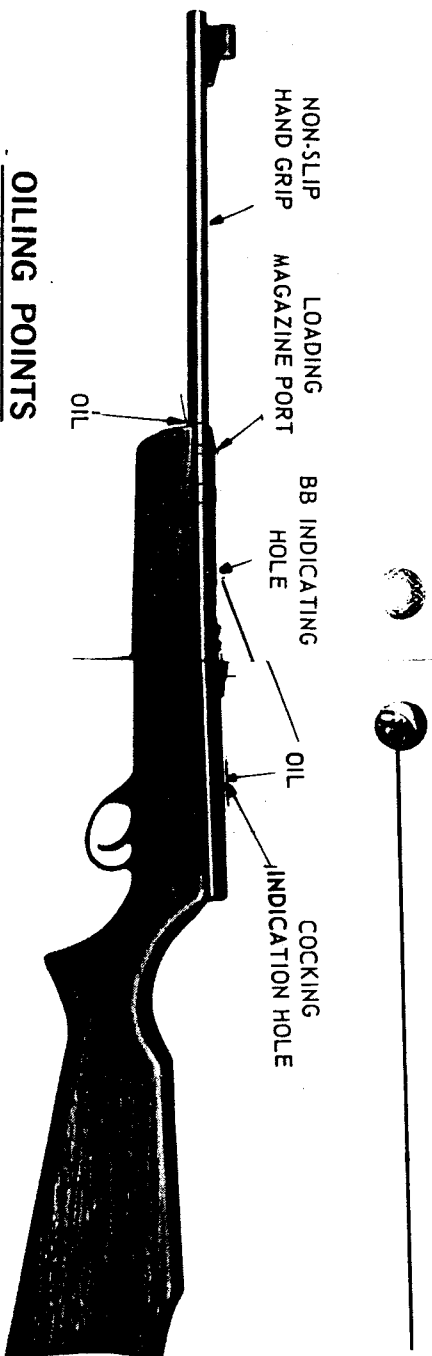

OILING POINTS

MODEL 3500

SlideMaster BB Air Rifle

Operating Instructions

Read all instructions carefully before operating your gun.

Always Follow These Simple Safety Rules:

1. Treat every gun as if it is a loaded gun.
2. Always keep muzzle of gun pointed in a safe direction.
3. Don't point at anything you don't intend to shoot.
4. Be sure of your target and your backstop.
5. Conduct yourself as a true sportsman in using your gun.



SlideMaster

3500

TO LOAD RIFLE WITH BB'S:

Be sure gun is not cocked while loading by pointing it in a safe direction, and pulling the trigger to fire rifle. Then, pour BB's into loading magazine port. For trouble free operation and more accurate shooting use Crosman Super BB's. There are many inferior BB's that will jam your rifle...Be sure with perfect round Crosman Super BB's.

TO SHOOT RIFLE:

With muzzle slightly elevated, place hand on barrel over non-slip hand grip (identification name) and slide barrel to rear as far as it will go. (**CAUTION**—DO NOT have finger on trigger or over muzzle end of barrel while cocking.) Slide barrel forward to extreme full length. (Must be fully extended and locked.) **CAUTION:** DO NOT slam barrel forward when returning to locked position as this will cause BB to override BB retainer and fall out of barrel. Take aim, squeeze trigger to shoot. Loaded chamber can be checked thru BB indicating hole. Rifle can be checked for cocked position thru cocking indication hole. (Rifle is cocked when hammer is visible.)

TO ADJUST REAR SIGHT:

Windage: Loosen both rear sight screws counterclockwise. This will free rear sight allowing it to be moved right or left until proper sight adjustment has been reached. Retighten rear sight screws.

Elevation: Move rear sight elevator towards breech to raise sight, to lower sight, raise rear sight slightly and at the same time push sight elevator towards muzzle.

LUBRICATION:

Lubricate all moving parts and thru BB indicating hole and cocking indicating hole. Oil sparingly with three or four drops of oil at each oiling point when parts appear dry. For best results use Crosman Special Pellgunoil®. Never use penetrating or detergent type oil as they may be harmful to valve seals.

Crosman 3500



SPECIFICATIONS

Mechanism: Slide Action Barrel Cocking

Caliber: BB

Magazine Capacity: 22 Crosman Super BB's

Weight: 4 lbs.

O/A Length: 36"

Sights: Adjustable Rear Sight

Barrel: Heavy Duty Solid Steel

Stock: Sports Style Monte Carlo Hardwood Walnut Finish

Finish: Gun Blue
