

Model GF700PSS Airsoft Gun
6mm Plastic BBs

OWNER’S MANUAL

READ ALL INSTRUCTIONS AND WARNINGS IN THIS MANUAL BEFORE USING THIS AIRSOFT GUN

Distributed by
Crosman Corporation
7629 Routes 5 & 20
Bloomfield, NY 14469
United States of America
www.crosman.com
1-800-724-7486
Made in China

GF700PSS-515

⚠ WARNING: This is not a toy. Adult supervision is required. Misuse may cause serious injury, particularly to the eye. Eye protection must be worn by the user and any person in range. May be dangerous up to 100 yds. Read the owner’s manual before using.

⚠ WARNING: Do not brandish or display this airsoft gun in public – it may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime.

⚠ WARNING: This product contains a chemical known to the state of California to cause cancer and birth defects (and other reproductive harms).

YOU AND OTHERS WITH YOU SHOULD ALWAYS WEAR SHOOTING GLASSES TO PROTECT YOUR EYES.
READ ALL INSTRUCTIONS BEFORE USING.

THIS AIRSOFT GUN IS INTENDED FOR USE BY THOSE 16 YEARS OF AGE OR OLDER.


BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS ABOUT THE USE AND OWNERSHIP OF THIS AIRSOFT GUN.

Please read this owner’s manual completely. Remember to treat this airsoft gun with the same respect you would a firearm. Always carefully follow the safety instructions found in this owner’s manual and keep this manual in a safe place for future use.

If you have any questions regarding your new airsoft gun, please contact Crosman Customer Service at: 1-800-724-7486, 585-657-6161 or www.crosman.com.

1. Learning the Parts of Your New Airsoft Rifle

Learning the names of the parts of your new airsoft rifle will help you to understand your owner’s manual. Use this manual to increase your enjoyment of this airsoft gun.

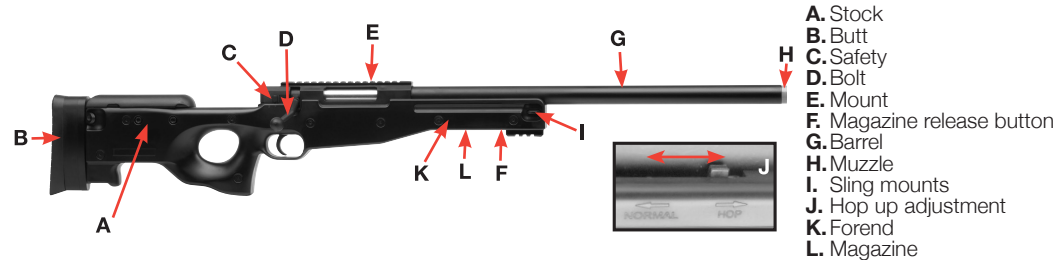

2. Operating the Safety

⚠ WARNING: Keep the air soft gun in the “ON SAFE” position until you are actually ready to shoot.


2.1 To Put the airsoft gun “ON SAFE:”

- Locate the safety on the right side of the gun directly behind the bolt.
- Push the safety all the way back toward the “S” for ON SAFE. (Fig. 2). The safety is not “ON SAFE” unless it is pushed all the way back.

Like all mechanical devices, a airsoft gun safety can fail. Even when the safety is “ON SAFE”, you should continue to handle the airsoft gun safely. NEVER point the airsoft gun at any person. NEVER point the airsoft gun at anything you do not intend to shoot.

2.2. To Take the airsoft gun “OFF SAFE”:

- Push the safety all the way forward toward the “F” for fire. When the safety is in the “F” position, the airsoft gun is “OFF SAFE” and can be fired. (Fig 2)

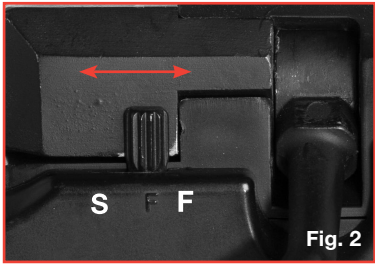

3. Adjusting the length of the Butt Pad

The length of the airsoft rifle can be extended by installing up to 3 stackable butt spacers. Each butt spacer is 3/8 inch in length.

- Remove the butt pad by loosening the 2 locking screws (Fig. 3)
- Choose the number of butt spacers you want to use and stack the butt spacers on the back of the stock.
- Place the butt pad on top of the stack of butt spacers.
- Install and tighten the two locking screws.



3.1 Other Assembly

Magazine

- Locate the magazine in the box.
- Insert the magazine into the airsoft rifle making sure it clicks into place.

4 Loading and Unloading Plastic BBs

A Speedloader is needed to load the magazine.

4.1 Loading the Speedloader


- Locate and push the rod release button on the side of the speedloader to release the spring rod. (Fig. 4)
- Open the speedloader cap.
- Insert 6mm plastic BBs into the speed loader.

4.2 Loading the Magazine

- Make sure the airsoft rifle is “ON SAFE” (Sec 2.1) and pointed in a SAFE DIRECTION.
- Press the magazine release button to release the magazine.
- Align the tip of the loaded speedloader with the hole in the magazine.
- Push the spring rod to load pellets into the magazine. Repeat this process until the magazine is full.
- Remove the speedloader.
- Insert the magazine into the airsoft gun making sure it clicks in place.

4.3 Unloading the Plastic BBs

- Make sure the airsoft rifle is “ON SAFE” (Sec 2.1) and pointed in a SAFE DIRECTION.
- Press the magazine release button to release the magazine.
- Do not put the magazine back in the gun.
- Point the airsoft rifle in a SAFE DIRECTION.
- Follow section 5 on cocking the airsoft gun.
- After reading section 7, on aiming and firing safely, take the gun “OFF SAFE” and pull the trigger.
- Repeat these steps until you are no longer firing plastic BBs.
- Put the airsoft gun back “ON SAFE”.

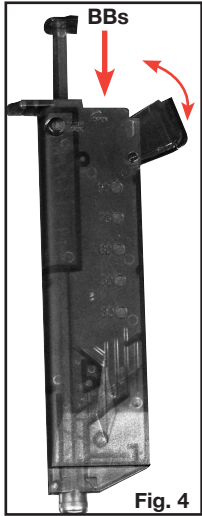

⚠ WARNING: Never assume that because the airsoft gun no longer fires a plastic BB and/or the magazine is removed, that a plastic BB is not lodged in the barrel. Always treat the airsoft gun as though it is loaded and with the same respect you would a firearm.

5. Cocking Your Airsoft rifle

⚠ WARNING: Always hold the bolt firmly when you cock it to prevent possible injury.

- Put the airsoft rifle “ON SAFE”. (See Step 2A)
- Holding the rifle firmly, pull the bolt up and all the way back. Use a straight stroke to prevent breakage (Fig. 6)
- Return the bolt to the original closed position with a smooth stroke. Be sure to hold the rifle firmly as you close the bolt.

NOTE: You must follow the procedure for cocking and firing your airsoft gun each time you shoot.



6. Adjusting the Hop Up

Your airsoft gun is manufactured with a hop-up system to change the spin on the BB.

- Locate the hop-up switch at the left side of the foregrip.
- Slide the hop-up adjustment switch to the desired position.
- After you finish reading the manual and have fired a few shots, watch the trajectory. Adjust the Hop Up as required to raise or lower the BB trajectory.

7 Aiming and Firing Safely

7.1 Aiming and Firing Safely

- You and others with you should always wear shooting glasses or goggles designed for airsoft to protect your eyes.
- Always aim your airsoft rifle in a SAFE DIRECTION. When you are sure of your target and backstop, and the area around the target is clear, cock the airsoft rifle (see sec. 4), take “OFF SAFE” (see sec 2.2) and squeeze the trigger to fire.
- Do not shoot at hard surfaces or at the surface of water. The plastic BBs may bounce off or ricochet and hit someone or something you had not intended to hit. If the plastic BBs should happen to hit a hard surface, DO NOT reuse those plastic BBs because they could cause possible damage to your airsoft rifle.

- Always choose your target carefully. It is best to shoot at targets, which are attached to a safe backstop. Your backstop should be checked for wear before and after each use. Replace your backstop if the surface is worn or damaged, or if a ricochet occurs.
- Your airsoft rifle is designed for target shooting and is suited for both indoor and outdoor use. Always remember to place your target carefully. THINK about what you will hit if you miss the target, or if the plastic BB ricochets.

7.2 Firing

- Make sure the airsoft rifle is “ON SAFE” (See Step 2.1).
- Point the airsoft rifle in a SAFE DIRECTION.
- Follow section 5 on cocking the airsoft gun and section 4 on loading.
- After reading section 7 on aiming and firing safely, take the gun “OFF SAFE” and pull the trigger.

8. Maintaining Your Airsoft Rifle

- Tampering with the airsoft rifle or attempts to change the airsoft rifle in any way may make it unsafe to use, cause injury particularly to the eye, and will void the warranty.
- If you drop your airsoft rifle, check to see that it works properly before you use it again. If anything seems changed, like a shorter or weaker trigger pull, this may mean worn out or broken parts. Call Customer Service at Crosman for assistance before using your airsoft rifle again.

9. Reviewing Safety

- Do not ever point the airsoft rifle at any person. Do not ever point the airsoft rifle at anything you do not intend to shoot.
- Always treat the airsoft rifle as though it is loaded and with the same respect you would a firearm.
- Always aim in a SAFE DIRECTION. Always keep the muzzle of the airsoft rifle pointed in a SAFE DIRECTION.
- Always keep the airsoft rifle “ON SAFE” until you are ready to shoot in a SAFE DIRECTION.
- Always check to see if the airsoft rifle is “ON SAFE” and unloaded when getting it from another person or from storage.
- Always keep your finger off the trigger and out of the trigger guard until ready to shoot.
- If your reading or prescription glasses are not safety glasses make sure you wear shooting glasses or airsoft goggles over your regular glasses.
- Use 6 mm plastic BBs only.
- Do not shoot at hard surfaces or at the surface of water. The plastic BBs may bounce off or ricochet and hit someone or something you had not intended to hit. If the plastic BBs should happen to hit a hard surface, DO NOT reuse those plastic BBs because they could cause possible damage to your airsoft rifle.
- Replace the backstop if it becomes worn. Place the backstop in a location that will be safe should the back-stop fail.
- Do not attempt to disassemble or tamper with your airsoft rifle. Call Customer Service at Crosman Corporation for repair.
- Do not put the airsoft rifle away loaded. Make sure ALL of the plastic BBs are unloaded from the airsoft rifle. (See sec 4.3)
- Always store this airsoft rifle in a secure location.

SPECIFICATIONS:

Mechanism:	Bolt Action	Weight:	6.4 pounds
Power Source:	Spring	Barrel:	Smooth bore aluminum
Velocity:	up to 400 fps (121.9 m/s)	Overall length:	39.25 inches
Caliber/ammo:	6mm plastic BBs	Safety:	Lever
Magazine Capacity:	up to 26 plastic BBs		

PERFORMANCE: Many factors can affect velocity, including brand of projectile, type of projectile and barrel condition.

Your airsoft gun was designed to work with Crosman or Gameface branded ammunition. Use of other ammunition may cause your gun to malfunction.

DO NOT RETURN THIS PRODUCT TO THE STORE.

Our friendly customer service representatives will be glad to help. You can get answers to frequently asked questions at www.crosman.com or you can contact us directly at 1-800-7AIRGUN (1-800-724-7486)

CUSTOMER SERVICE

If your airsoft gun is not functioning, we recommend that you call Crosman Corporation Customer service at 1-800-724-7486 or 585-657-6161. (International customers should contact their distributor.) DO NOT ATTEMPT TO DISASSEMBLE IT! If you take it apart you probably will not be able to reassemble it correctly. Crosman assumes no warranty responsibility under such circumstances.

For optimum performance use Crosman ammunition only. Using other than Crosman branded ammunition may cause your product to malfunction and may void your warranty.

LIMITED 30 DAY WARRANTY

This product is warranted to the retail consumer for 30 days from date of retail purchase against defects in material and workmanship and is transferable.

WHAT IS COVERED

Replacement parts and labor. Transportation charges to consumer for repaired product.

WHAT IS NOT COVERED

Transportation charges to Crosman for product. Damages caused by abuse, modification or failure to perform normal maintenance. Any other expense. CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, OR INCIDENTAL EXPENSES, INCLUDING DAMAGE TO PROPERTY. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

WARRANTY CLAIMS

USA Customers: Attach your name, address, description of problem, phone number and copy of sales receipt to product. Package and return to Crosman Corporation, 7629 Routes 5 & 20, Bloomfield, NY 14469.

International Customers: Please return product to your nearest distributor. If you do not know your distributor, please call 585-657-6161 and ask for our International Department for assistance.

IMPLIED WARRANTIES

ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO 30 DAYS FROM DATE OF RETAIL PURCHASE. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

To the extent any provision of this warranty is prohibited by federal, state, or municipal law which cannot be pre-empted, it shall not be applicable. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

CROSMAN is a registered trademark of Crosman Corporation in the United States.

