



Exploded View Parts List

Elite PowerMaster

B1500EP


.177 (4.5mm) Caliber

Crosman Corporation
7629 Routes 5 & 20
East Bloomfield, NY 14443

Phone: (800) 724-7486
Parts Order Fax: (585) 657-5405

www.crosman.com

B1500EP

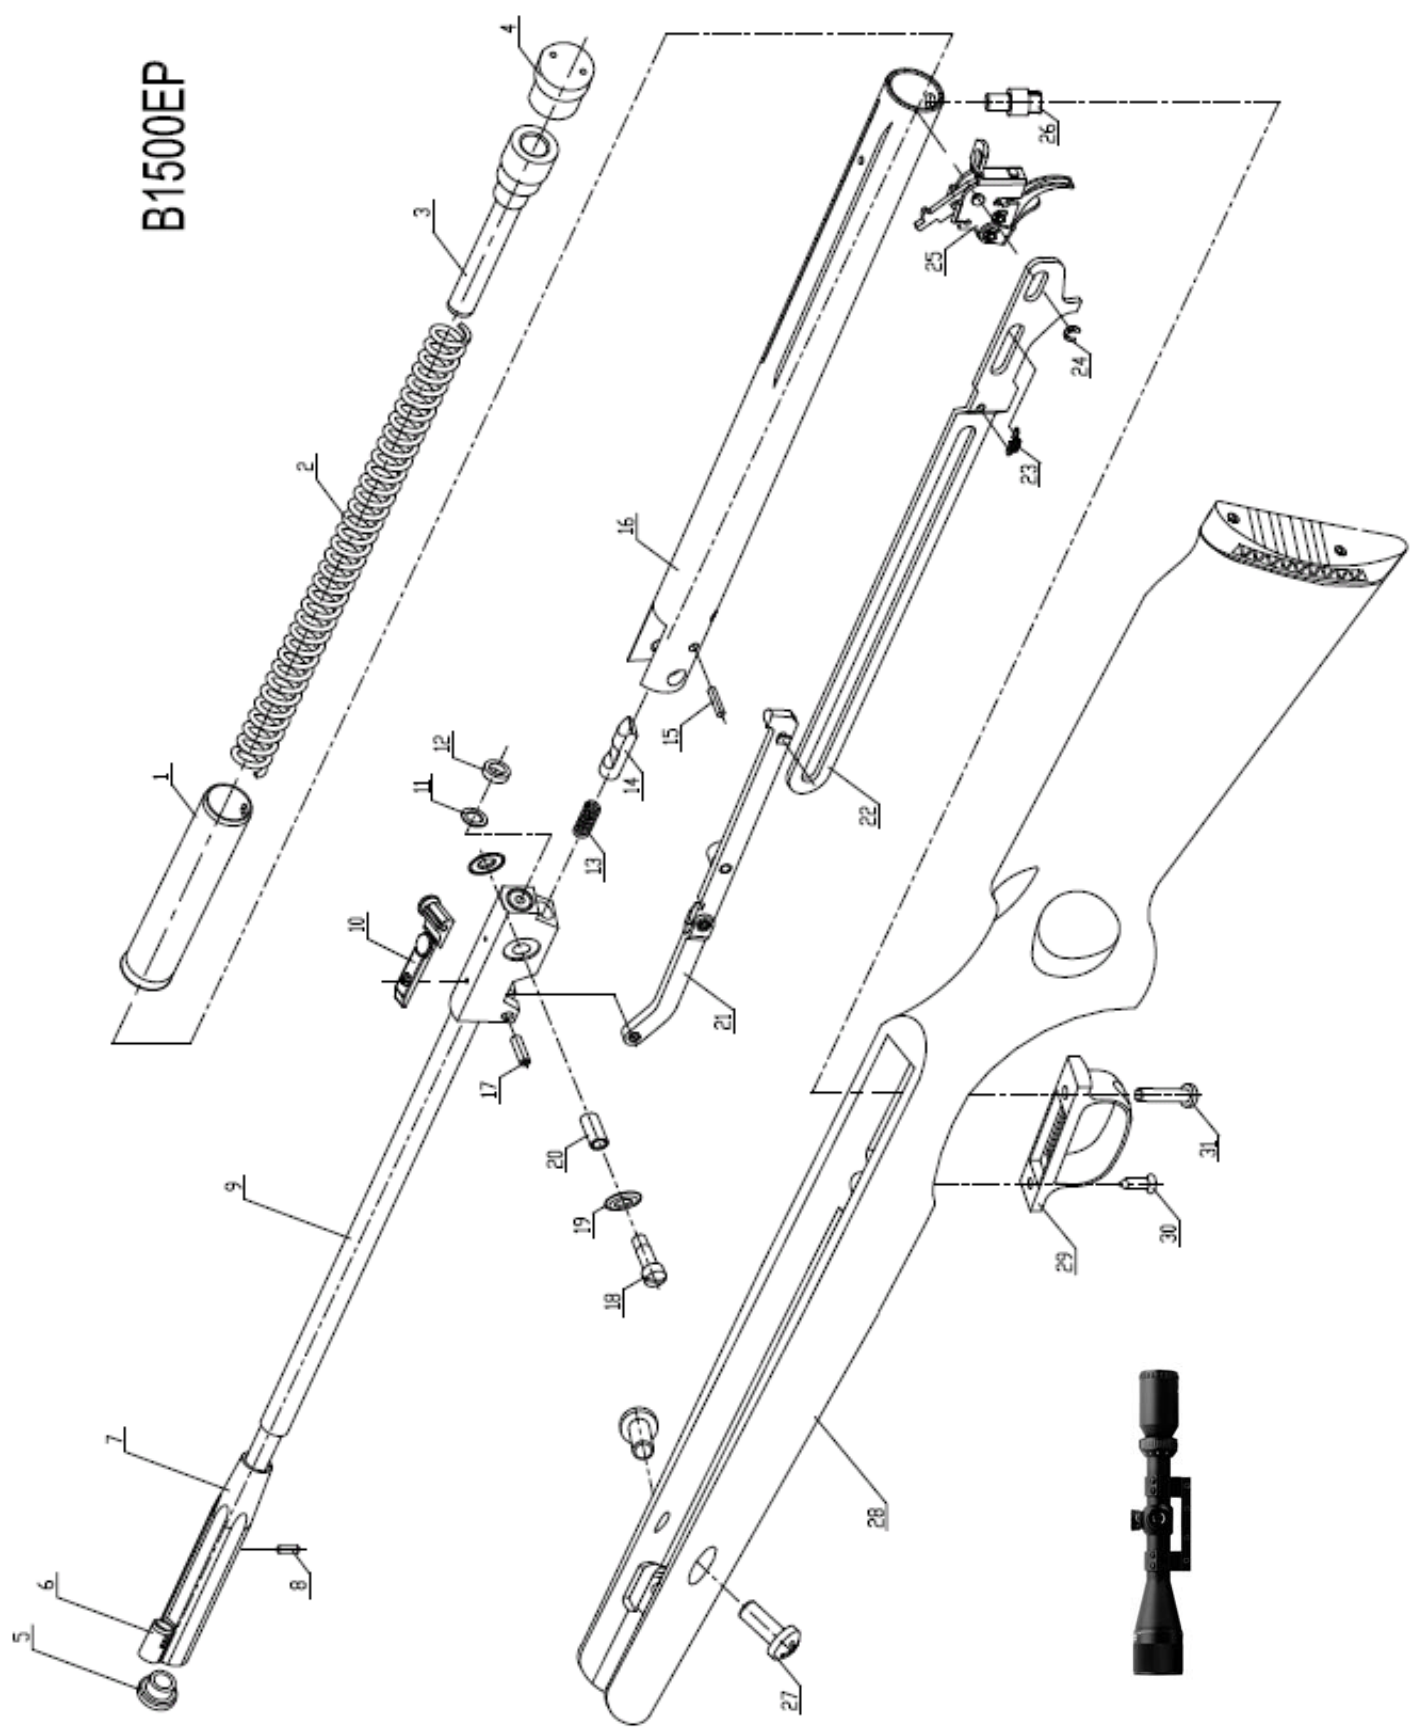

<u>Item Call Out</u>	<u>Part #</u>	<u>Description</u>	<u>B1500EP</u>
1	B22-04-00	Piston Assembly	1
2	B22-00-7	Piston Spring	1
3	B22-00-6	Back Spring Guide	1
4	B22-00-5	Tube Cover	1
5	B22-00-2	Muzzle Break Cover	1
6	B22-07-00	Front Sight	1
7	B22-00-3	Muzzle Break	1
8	GBT78-2000-M5x6	Muzzle Break Screws	1
9	B22-01-100	Barrel Assembly	1
10	B20-02-00	Rear Sight	1
11	B22-00-1	Adjust Washer	0-3
12	B20-00-3	Breach Seal	1
13	B12-01-2A	Jam Spring	1
14	B22-01-1	Alive Jam	1
15	B22-00-9	Detent	1
16	B22-03-00	Compression Tube Assembly	1
17	B22-00-11	Link Pin	1
18	B22-00-12	Break Bolt	1
19	B18-00-15A	Washer	1
20	B22-01-4	Bushing	1
21	B22-02-00	Lever Assembly	1
22	B22-00-10	Bear Trap Lever	1
23	B18-00-12A	Safety Spring	1
24	GBT-896-1986-3	"E" Ring	1
25	B22-06-00	Trigger Pack Assembly	1
26	B18-00-9	Stock Link Pin	1
27	GBT-818-2000-M6x12	Pan Head Screws	1
28	B22-1-A-01-00	Stock and Butt Plate	1
29	B18-00-11A	Trigger Guard	1
30	GB847-85-ST3-5x16	Screw, Trigger Guard Front	1
31	GB823-88-M6X20	Screw, Trigger Guard Rear	1
32	3940AO	3-9x40mm AO w/1pc Rings	1

For Current Pricing Contact Crosman Customer Service at (800) 724-7486.

This parts list is intended to be an informational guide in ordering parts. It is not instructional material and we therefore assume no responsibility for those who use without proper factory training.

Please order by part number and description.

Check or money order for the total price must accompany the order.

Updated 1/26/09.