



Model **V-300**

**LEVER
SLIDE-ACTION** **BB** **Air Pistol**



Crosman Arms Company, Inc.



Instructions For Operation and Care of Your Crosmán Model V-300 BB Air Pistol

IMPORTANT: Read all instructions carefully before operating your gun.

Always Follow These Simple Safety Rules:

1. Treat every gun as if it is a loaded gun.
2. Always keep muzzle of gun pointed in a safe direction.
3. Don't point at anything you don't intend to shoot.
4. Check safety before loading.
5. Be sure of your target and your backstop.
6. Conduct yourself as a true sportsman in using your gun.

Treat pistol at all times as if it were loaded. If pistol is loaded BB's can be seen in BB indicating hole in magazine.

A WORD OF CAUTION!!

Your V-300 is an exceptional, high-powered BB pistol—it shoots accurately, and packs a real wallop. Before loading with BB's, read the instructions carefully to learn all of the features.

Put pistol on safe by pushing safety bar to right. **TEST THE COCKING ACTION SLOWLY**—note each of the 3 "click" positions.

1st click . . . is a cocking position and prevents lever from snapping back if accidentally released. This is **NOT** a safety position—gun will discharge if trigger is pulled and safety is not on.

2nd click . . . is for low-power shooting.


3rd click . . . is for maximum power.

COCKING LEVER MUST ALWAYS BE RETURNED TO NORMAL POSITION IN HANDLE BEFORE SHOOTING or it will snap back with considerable force and cause damage.

For more shooting fun—take good care of your pistol, and always observe safe shooting practices.

TO LOAD PISTOL WITH BB'S:

With pistol pointed in a safe direction, squeeze trigger to fire pistol. Push safety bar to right to put pistol on safe. Slide Magazine cover to rear and fill magazine with Crosmán Super BB's thru loading port. Magazine holds up to 22 BB's. Slide magazine cover forward to close.

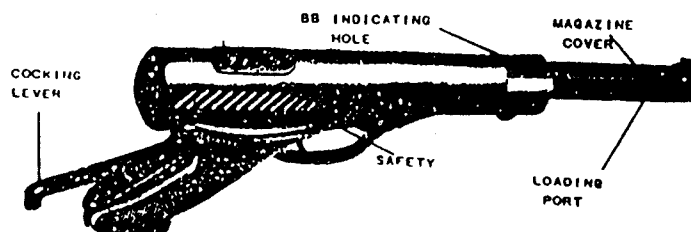



TO COCK AND SHOOT PISTOL:

Push safety bar to right to put pistol on safe. Hold pistol with left hand in front of Trigger Guard, muzzle up and forward and sights up. Open cocking lever with right hand, place thumb in radius of lever and cock upwards to full position, pivoting left hand up and to the rear. Close cocking lever, push safety to left to fire position, take aim, squeeze trigger to shoot. Pistol must be cocked each time to fire.




TO ADJUST SIGHT:

Windage: Loosen both rear sight screws counterclockwise, this will free rear sight allowing it to be moved right or left until proper sight adjustment has been reached. Retighten rear sight screws.

Elevation: Turn rear sight elevation screw clockwise to raise sight, counterclockwise to lower sight.

CARE OF PISTOL:

For best results oil sparingly with three or four drops of CROSMAN SPECIAL PELLGUN-OIL® at each oiling point when parts appear dry. Oiling will increase velocity. Never use penetrating or detergent type oil as they may harm valve seal.

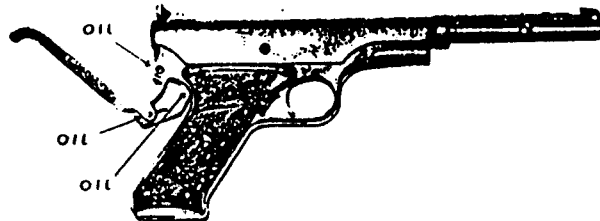

REPAIR SERVICE:

Postal Regulations prohibit the mailing of pistols by an individual. Refer to the attached list of Crosman Authorized Service Stations for service, including warranty repair work or see your dealer where purchased.