



Model GF460 Airsoft Gun 6mm Plastic BB OWNER'S MANUAL

Distributed by:
Crosman Corporation
7629 Routes 5 & 20
Bloomfield, NY 14469
www.crosman.com
1-800-724-7486
Made in China

GF460A515

A WARNING: This is not a toy. Adult supervision is required. Misuse may cause serious injury, particularly to the eye. Eye protection must be worn by the user and any person in range. May be dangerous up to 100 yds. Read the owner's manual before using.

A WARNING: Do not brandish or display this airsoft gun in public – it may confuse people and may be a crime. Police and others may think it is a firearm. Do not change the coloration and markings to make it look more like a firearm. That is dangerous and may be a crime. READ ALL INSTRUCTIONS AND WARNINGS IN THIS MANUAL BEFORE USING THIS AIRSOFT GUN.

A WARNING: This product contains a chemical known to the state of California to cause cancer and birth defects (and other reproductive harm).

BUYER AND USER HAVE THE DUTY TO OBEY ALL LAWS ABOUT THE USE AND OWNERSHIP OF THIS AIRSOFT GUN.

Recommend 18 years or older to purchase. Intended for use by those 16 or older.


NOTE: Charge the battery 3-4 hours prior to initial use. This airsoft gun will not operate properly without a fully charged battery. DO NOT OVERCHARGE THE BATTERY. UNPLUG THE BATTERY CHARGER WHEN NOT IN USE.

Please read this owner's manual completely. And remember, this airsoft gun is not a toy. Treat it with the same care you would a firearm. Always carefully follow the safety instructions found in this owner's manual and keep this manual in a safe place for future use.

If you have any questions regarding your new airsoft gun, please contact Crosman at 1-800-724-7486, 585-657-6161 or www.crosman.com.

1. LEARNING THE PARTS OF YOUR NEW AIRSOFT GUN

Learning the names of the parts of your new airsoft gun will help you to understand your owner's manual. Use this manual to increase your enjoyment of this airsoft gun.

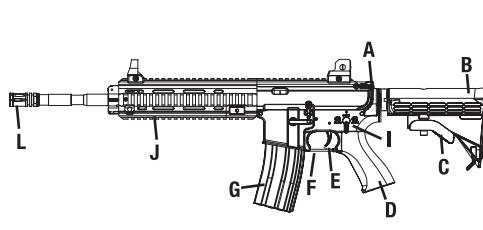

A. Charging Handle
B. Retractable Stock
C. Stock Release lever
D. Grip
E. Trigger
F. Trigger Guard
G. 300 Round Magazine
H. Magazine release button (Fig. 4)
I. Safety (see Fig. 2)
J. Forearm/Hand Guard
K. Magazine cap (Fig. 4)
L. Muzzle

2. OPERATING THE SAFETY

A. TO PUT THE AIRSOFT GUN "ON SAFE"

- Locate the safety on the left side of the airsoft gun.
- Turn the safety lever to "SAFE" for "ON SAFE". (Fig. 2A). The safety is not "ON SAFE" unless it is pointing to "SAFE".

A WARNING: Keep the airsoft gun in the "ON SAFE" position until you are actually ready to shoot. Then turn the safety to the "OFF SAFE" position.

Like all mechanical devices, an airsoft gun safety can fail. Even when the safety is "ON SAFE", you should continue to handle the airsoft gun safely.

NEVER point the airsoft gun at any person. NEVER point the airsoft gun at anything you do not intend to shoot.

B. TO TAKE THE AIRSOFT GUN "OFF SAFE"

NOTE: This airsoft gun fires in semi or full auto-mode. Full auto means it will continue to fire plastic BBs as long as you hold the trigger. Semi- auto means you will have to pull the trigger each time you want to fire a shot.

- Locate the safety on the left side of the receiver. (Fig. 2a)
- Turn the lever to "SEMI" for semi-auto mode. (Fig. 2b)
- Turn the lever to "AUTO" for full auto mode. (Fig. 2c)
- The airsoft gun is "OFF SAFE" and ready to fire when pointing to either "semi" or "auto".

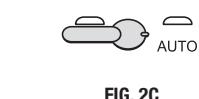
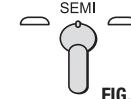


FIG. 2A

FIG. 2B

FIG. 2C

3. CHARGING, LOADING AND REMOVING THE BATTERY

A. CHARGING THE BATTERY

NOTE: The battery charging time is 3-4 hours prior to initial use. After firing 500 shots, allow the gun and battery to cool for 5 to 10 minutes after firing. For optimum performance completely use up the battery before recharging. DO NOT OVERCHARGE THE BATTERY. UNPLUG THE BATTERY CHARGER WHEN NOT IN USE.

B. LOADING THE BATTERY

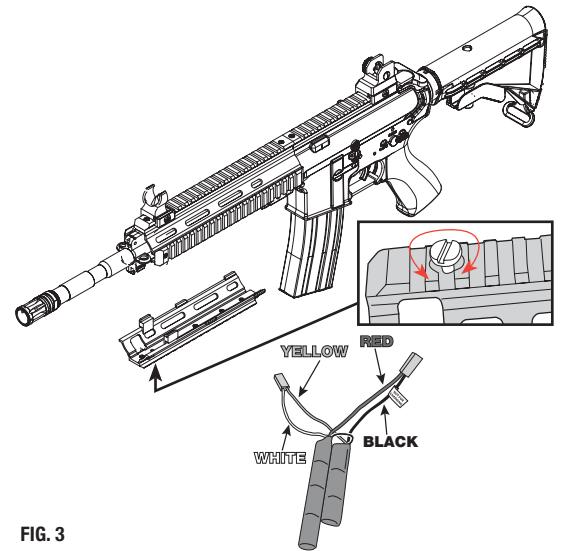


FIG. 3

- Remove the screw that is holding the fore rail.
- Remove the bottom rail.

NOTE: Battery has two connectors. Use the unmarked connector for the wall charger.


- Connect the battery to the gun wire connector (use the connector marked "NOT FOR CHARGING"). Then place the connectors in the space above the barrel and place the battery beside the barrel.
- Place the front end of the fore rail back into position, being sure to hold the battery in place.
- Re-insert the pin screw to hold the fore rail in position.

C. REMOVING THE BATTERY

- Remove the pin screw that is holding the bottom of the fore rail.
- Remove the battery from the fore rail.
- Place the front end of the fore rail back into position.
- Re-insert the pin screw to hold the fore rail in position.

4. LOADING AND UNLOADING PLASTIC BBS

A. LOADING

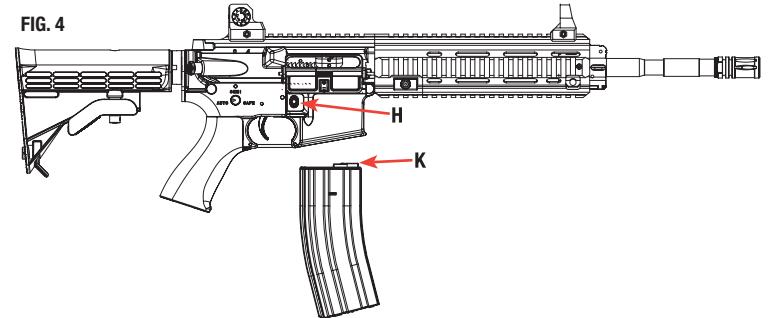

Use 6 mm plastic BBs only in this airsoft gun. Use of any other ammunition can cause injury to you or damage to the airsoft gun. We recommend using Crosman or GameFace .20g or .25 Heavy BBs.

- Make sure the airsoft gun is "ON SAFE" (section 2A).
- Point the airsoft gun in a SAFE DIRECTION.
- While supporting the BB magazine, push the magazine release lever forward and remove the magazine.
- Slide open the magazine cap door.
- Insert 6 mm plastic BBs.
- Close the magazine cap door.
- Insert the loaded magazine back into the airsoft gun.

NOTE: IT IS IMPORTANT TO PUT THE MAGAZINE IN THE GUN PRIOR TO WINDING TO HELP AVOID JAMS.
• Winding before putting into the gun can cause a jam.

B. UNLOADING PLASTIC BBS

- Make sure the airsoft gun is "ON SAFE" (section 2A).
- Point the airsoft gun in a SAFE DIRECTION.
- While supporting the BB magazine, push the magazine release lever forward and remove the magazine.
- Slide the magazine cap open.
- Flip open the loading door behind the ready tube.
- Pour out BBs.

NOTE: BBs will release rapidly.
• Rotate the wind up wheel to draw BBs into the ready tube.
• Repeat the above steps until all the BBs are out of the magazine.
• Close the magazine cap.

Never assume that because the airsoft gun no longer fires a BB and/or the loading chamber is removed, that a BB is not lodged in the barrel. Always treat the airsoft gun as though it is loaded and with the same respect you would a firearm.

5. SELECTING THE FIRING MODE

NOTE: This airsoft gun fires in semi or full auto-mode. Full auto means it will continue to fire plastic BBs as long as you hold the trigger. Semi- auto means you will have to pull the trigger each time you want to fire a shot.

- Locate the safety on the left side of the receiver. (Fig. 2a)
- Turn the lever to "SEMI" for semi-auto mode. (Fig. 2b)
- Turn the lever to "AUTO" for full auto mode.
- The airsoft gun is "OFF SAFE" and ready to fire when pointing to either "semi" or "auto."

6. USING THE HOP-UP MODE

Your airsoft gun is manufactured with an adjustable hop-up system. The purpose of this system is to change the spin on the BB as it leaves the muzzle, allowing you to adapt your shot for different distances.

- Pull out and hold the charging handle to open the ejection port cover.
- Turn the hop-up adjustment dial clockwise for more spin, counter-clockwise for less spin.

7. ADJUSTING THE STOCK

- Your airsoft gun is shipped with the stock in the closed position and is capable of adjusting to different lengths.
- Before adjusting the stock make sure your airsoft gun is "ON SAFE", (see section 2A) and pointed in a SAFE DIRECTION.

- Push the stock release lever and adjust the stock until it locks into the desired position.

8. AIMING AND FIRING SAFELY

A. FIRING SAFELY

- You and others with you should always wear eye protection designed for airsoft to protect your eyes.
- Always point your airsoft gun in a SAFE DIRECTION.
- Do not shoot at hard surfaces or at the surface of water. The plastic BBs may bounce off or ricochet and hit someone or something you had not intended to hit.
- DO NOT re-use plastic BBs because they could possibly cause damage to your airsoft gun.
- Your airsoft gun is designed for target shooting and is suited for both indoor and outdoor use.
- Always remember to place your target carefully. THINK about what you will hit if you miss the target.
- When you are sure of your target and backstop, and the area around the target is clear, load and charge the airsoft gun following sections 3 and 4. Take the airsoft gun "OFF SAFE" (section 2A) aim and pull the trigger to fire.

B. ADJUSTING THE SIGHTS

The rear sight is adjustable for windage.

- To adjust for windage, use the dial on the side of the sight.
- Turn clockwise to move the point of impact to the right.
- Turn counter-clockwise to move the point of impact to the left.

The rear sight has 2 different apertures. To change apertures flip from one to the other.

9. MAINTAINING YOUR AIRSOFT GUN

- DO NOT MODIFY OR ALTER YOUR AIRSOFT GUN. Tampering with the airsoft gun or attempts to change the airsoft gun in any way may make it unsafe to use, may cause serious injury or death and will void the warranty.
- If you drop your airsoft gun, visually check to see that it works properly before you use it again. If anything seems changed, like a shorter or weaker trigger pull, this may mean parts are worn out or broken. Call Customer Service at Crosman for assistance before using your airsoft gun again.

10. TROUBLE SHOOTING/INCREASING YOUR SHOOTING ENJOYMENT

- Occasionally shake the gun to ensure smooth BB feeding.
- This is a high precision airsoft rifle. Prevent dust and dirt from getting into the magazine to help maintain the performance of your airsoft rifle.
- If the efficiency of BB feeding seems to decrease, remove all the BBs from the magazine and spray silicone oil for 1 to 2 seconds. (Note that the hop-up operation may become unstable for a while after using silicone oil).
- An odor may be generated from the motor initially from a new airsoft gun, this is normal.
- If the airsoft gun does not fire in semi-auto mode, follow safe shooting rules and turn the gun to full auto mode for 5 to 10 shots before returning to semi-auto mode.
- Change the battery if firing cycle becomes slow.
- Give the airsoft gun a rest for 5 to 10 minutes after about 500 BBs have been fired.

CLEARING A JAM

Never look down the end of barrel to see if a jam has been cleared.

1. Make sure the airsoft gun is "ON SAFE" and pointed in a SAFE DIRECTION.
2. Remove magazine.
3. Insert the tapered end of the cleaning rod into the barrel, with the angle toward the breech (where the magazine connects).
4. CAREFULLY and slowly apply more pressure until you push the BB out of the breech.
5. Reinstall the magazine and test gun.

11. MOTOR ADJUSTMENT

Periodic adjustment of the motor is required to keep your airsoft gun operating efficiently. To adjust motor, ensure gun is unloaded of all BBs, see section 4B Put gun "ON SAFE". (Sec. 2A)

A. MOTOR RUNS BUT GUN DOES NOT FIRE

Is gun barrel plugged?

- Insert tapered end of cleaning rod into barrel, tapered side facing loading chamber. Push rod into barrel to make sure there are no BB's stuck.

Is motor spinning?

- Locate screw on base of grip and remove. Remove grip. Using 2.5mm allen wrench turn adjustment screw ¼ turn clockwise to tighten engagement of motor and gears. Squeeze trigger if gun does not fire repeat procedure until gun fires properly.

B. MOTOR DOES NOT RUN

Is battery charged?

- Charge battery minimum 3 hours, maximum 4 hours for full charge

Motor still does not turn with fully charged battery

- Locate screw on base of grip and remove. Remove grip. Using 2.5mm allen wrench turn adjustment screw ¼ turn counter clockwise to loosen engagement of motor and gears. Squeeze trigger if gun does not fire repeat procedure until gun fires properly.

- DO NOT MODIFY OR ALTER YOUR AIRSOFT GUN. Tampering with the airsoft gun or attempts to change the airsoft gun in any way may make it unsafe to use, may cause serious injury and will void the warranty.

- If you drop your airsoft gun, visually check to see that it works properly before you use it again. If anything seems changed, like a shorter or weaker trigger pull, this may mean parts are worn out or broken. Call Customer Service at Crosman for assistance before using your airsoft gun again.

C. TO CLEAN THE AIRSOFT GUN BARREL:

- Turn off hop up system on gun (sec 5)

- Spray a .22 cleaning patch with Crosman Nitro Lubricant oil.

- With patch on rod, insert in into barrel to clean

- Use an in and out motion

- Swab barrel 3-4 times

- Repeat swabbing procedure with a dry patch

- Barrel is clean when patches come out clean after dry swabbing.

12. REVIEWING SAFETY

- Do not ever point the airsoft gun at any person. Do not ever point the airsoft gun at anything you do not intend to shoot.

- Always treat the airsoft gun as though it is loaded and with the same respect you would a firearm.

- Always aim in a SAFE DIRECTION. Always keep the muzzle of the airsoft gun pointed in a SAFE DIRECTION.

- Always keep the airsoft gun "ON SAFE" until you are ready to shoot in a SAFE DIRECTION.

- Always check to see if the airsoft gun is "ON SAFE" and unloaded when getting it from another person or from storage.

- Always keep your finger off the trigger and out of the trigger guard until ready to shoot.

- You and others with you should always wear eye protection to protect your eyes.

- Always wear eye protection designed for airsoft over your regular glasses.

- Use 6 mm plastic BBs only.

- Do not reuse plastic BBs because they could cause possible damage to your airsoft gun.

- Do not shoot at hard surfaces or at the surface of water. The plastic BBs may bounce off or ricochet and hit someone or something you had not intended to hit.



Modelo GF460 Pistola Airsoft

Perdigones BB de plástico de 6 mm MANUAL DEL USUARIO

Distribuido por: Crosman Corporation • 7629 Routes 5 & 20 • Bloomfield, NY 14469
www.crosman.com • 1-800-724-7486 • Hecho en China

ADVERTENCIA: Esto no es un juguete. Se requiere la supervisión de un adulto. El mal uso puede causar lesiones graves, especialmente en los ojos. El usuario y toda persona que se encuentre en el rango de tiro deben utilizar protección ocular. Puede ser peligroso hasta 100 yardas (91 m). Lea el manual del usuario antes de usarla.

ADVERTENCIA: No blanda ni exhiba esta pistola Airsoft en público; puede confundir a la gente y puede constituir un delito. La policía y otras personas pueden creer que se trata de un arma de fuego. No cambie la coloración ni las marcas para que aparezca ser un arma de fuego. Eso es peligroso y puede ser un delito. LEA TODAS LAS INSTRUCCIONES Y ADVERTENCIAS INCLUIDAS EN ESTE MANUAL ANTES DE USAR ESTA PISTOLA AIRSOFT.

ADVERTENCIA: Este producto contiene un producto químico conocido en el estado de California como causante de cáncer y defectos congénitos (y otros daños reproductivos).

EL COMPRADOR Y EL USUARIO TIENEN EL DEBER DE OBEDECER TODAS LAS LEYES RELATIVAS AL USO Y PROPIEDAD DE ESTA PISTOLA AIRSOFT.

Se recomienda que sean personas mayores de 18 años quienes realicen la compra. Está diseñada para ser usada por personas mayores de 16 años.


NOTA: cargue la batería de 3 a 4 horas antes de usarla por primera vez. Esta pistola Airsoft no funcionará adecuadamente sin la batería completamente cargada. NO SOBRECARGUE LA BATERÍA. DESENCHUFE EL CARGADOR DE LA BATERÍA CUANDO NO ESTÉ EN USO.

Lea completamente este manual del usuario. Y recuerde, esta pistola Airsoft no es un juguete. Siempre trátelas con el mismo cuidado con el que trataría un arma de fuego. Siempre cumpla cuidadosamente con las instrucciones de seguridad incluidas en este manual del usuario y conserve este manual en un lugar seguro para futuras consultas.

Si tiene alguna consulta acerca de su nueva pistola Airsoft, comuníquese con Crosman llamando al 1-800-724-7486, 585-657-6161 o visite www.crosman.com.

1. DESCRIPCIÓN DE LAS PIEZAS DE SU NUEVA PISTOLA AIRSOFT

Aprender los nombres de las piezas de su nueva pistola Airsoft le ayudará a comprender mejor el manual del usuario. Utilice este manual para disfrutar aún más de la pistola Airsoft.

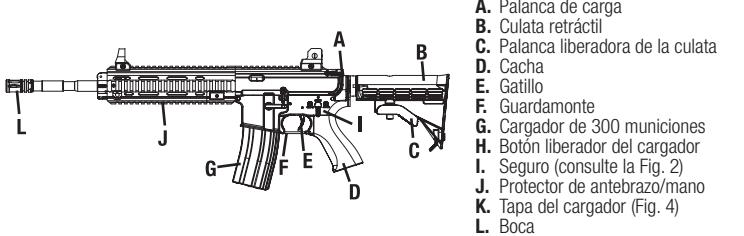

2. OPERACIÓN DEL SEGRO

A. PARA ACTIVAR EL SEGRO DE LA PISTOLA AIRSOFT ("ON SAFE")

- Busque el seguro que se encuentra en el lado izquierdo de la pistola Airsoft.
- Coloque la palanca del seguro en la posición de seguro activado ("SAFE") para activarlo ("ON SAFE") (Fig. 2A). El seguro no está activado ("ON SAFE") a menos que apunte a la posición de seguro activado ("SAFE").

ADVERTENCIA: Mantenga la pistola Airsoft en la posición de seguro activado ("ON SAFE") hasta que usted esté realmente preparado para disparar. Luego vuelva a colocar el seguro en la posición de seguro desactivado ("OFF SAFE").

Como todos los dispositivos mecánicos, el seguro de la pistola Airsoft puede fallar. Aún cuando el seguro esté activado ("ON SAFE"), debe seguir manipulando la pistola Airsoft con mucho cuidado.

NUNCA apunte la pistola Airsoft hacia una persona. **NUNCA** apunte la pistola Airsoft hacia un objeto al que no deseé disparar.

B. PARA QUITAR EL SEGRO DE LA PISTOLA AIRSOFT ("OFF SAFE")

NOTA: esta pistola Airsoft dispara en modo semiautomático y automático. El modo automático significa que continuará disparando perdigones BB de plástico mientras mantenga apretado el gatillo. El modo semiautomático significa que tendrá que tirar del gatillo cada vez que deseé disparar.

- Busque el seguro que se encuentra en el lado izquierdo de la corredera (Fig. 2a).
- Coloque la palanca en "SEMI" para el modo semiautomático (Fig. 2b).
- Coloque la palanca en "AUTO" para el modo automático (Fig. 2c).
- La pistola Airsoft se encuentra con el seguro desactivado ("OFF SAFE") y lista para disparar tanto en la posición "semi" como "auto".



3. CARGA, INSTALACIÓN Y EXTRACCIÓN DE LA BATERÍA

A. CARGA DE LA BATERÍA

NOTA: La batería tiene dos conectores. Utilice el conector NO MARCADO PARA LA CARGA. • Conecte el conector del cable de la batería marcada "NOT FOR CHARGING" para arma. A continuación, coloque los conectores en el espacio por encima del cañón y coloque la batería cerca del cañón.

B. INSTALACIÓN DE LA BATERÍA

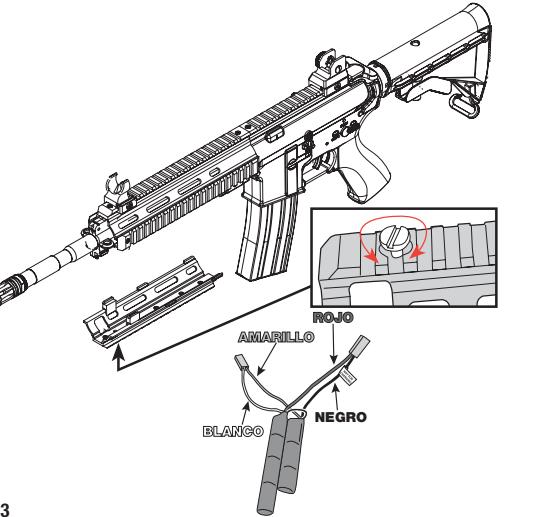


FIG. 3


- Quite el pasador que sostiene la parte inferior del riel delantero.
- Inserte la batería en el riel delantero, como se muestra.
- Coloque el conector en el espacio que está arriba del cañón.
- Coloque el frente del riel delantero en la posición original, asegurándose de sostener la batería en su lugar.
- Vuelva a insertar el pasador para sostener el riel delantero en su posición.

C. EXTRACCIÓN DE LA BATERÍA

- Quite el pasador que sostiene la parte inferior del riel delantero.
- Quite la batería que se encuentra en el riel delantero.
- Coloque el frente del riel delantero en su posición original.
- Vuelva a insertar el pasador para sostener el riel delantero en su posición.

4. CARGA Y DESCARGA DE PERDIGONES BB DE PLÁSTICO

A. CARGA

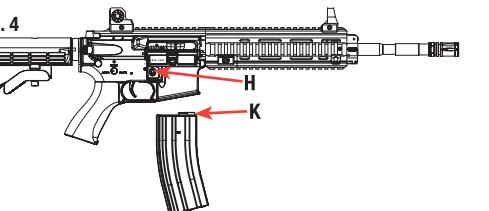

Use solamente perdigones BB de plástico de 6 mm en esta pistola Airsoft. El uso de una munición diferente podría causar lesiones personales o hacer que la pistola Airsoft se dañe. Recomendamos usar perdigones BB pesados de 0.20 o 0.25 g Crosman o GameFace.

- Asegúrese de que la pistola Airsoft tenga el seguro activado ("ON SAFE") (Sección 2A).
- Apunte la pistola Airsoft hacia una DIRECCIÓN SEGURA.
- Mientras sostiene el cargador de perdigones BB, presione la palanca liberadora del cargador y quite el cargador.

• Deslice la tapa del cargador para abrirlo.

• Inserte los perdigones BB de plástico de 6 mm.

• Cierre la tapa del cargador.

• Inserte el cargador cargado nuevamente en la pistola Airsoft.

• Gire la rueda para llevar los perdigones BB de plástico al tubo de municiones. Gire la rueda de 50 a 75 vueltas para lograr un rendimiento óptimo.

NOTA: ES IMPORTANTE COLOCAR EL CARGADOR EN LA PISTOLA ANTES DE GIRAR LA RUEDA PARA EVITAR ATASCOS. Girar la rueda antes de colocar el cargador en la pistola puede generar un atasco.

El ajuste periódico del motor es requerido para mantener su arma de aire suave funcionando eficientemente.

Para ajustar el motor, asegure que la arma no está cargada con municiones, vea sección 4B Ponga la arma en la posición "SEGRO ACTIVADO". (Sec. 2A)

A. EL MOTOR FUNCIONA PERO LA ARMA NO DISPARA: ¿ESTÁ BLOQUEADO EL CAÑÓN DE LA ARMA?

- Introduzca una baqueta con extremo abusado dentro del cañón, el lado abusado orientado hacia la cámara de carga. Empuje la baqueta dentro del cañón para asegurarse que no hay municiones atoradas.

¿ESTÁ GIRANDO EL MOTOR?

- Ubique el tornillo en la base de la empuñadura y quitelo. Quite la empuñadura. Con una llave allen de 2.5 mm, gire el tornillo de ajuste 1/4 de vuelta en sentido contrario a las manecillas del reloj para apretar el motor de conexión y los engranajes.. Apriete el gatillo, si la arma no dispara repita el procedimiento hasta que la arma dispare correctamente.

B. EL MOTOR NO FUNCIONA: ¿ESTÁ CARGADA LA BATERÍA?

- Cargue la batería por un mínimo de 4 horas, un máximo de 6 horas para carga completa.

¿EL MOTOR AUN NO FUNCIONA CON LA BATERÍA CARGADA COMPLETAMENTE?

- Ubique el tornillo en la base de la empuñadura y quitelo. Quite la empuñadura. Con una llave allen de 2.5 mm, gire el tornillo de ajuste 1/4 de vuelta en sentido contrario a las manecillas del reloj para aflojar la conexión del motor y los engranajes. Apriete el gatillo, si la arma no dispara repita el procedimiento hasta que la arma dispare correctamente.

- NO MODIFIQUE NI ALTERE EL RIFLE DE AIRE SUAVE. Forzar el rifle de aire suave o intentar modificarlo de cualquier manera pueden hacer su uso inseguro, causar graves lesiones y anulará la garantía.

- Si el rifle de aire suave se cae, revise visualmente que funcione correctamente antes de volverlo a usar. Si parece que cualquier cosa ha cambiado, como que el gatillo está más suave o más duro, puede indicar que hay piezas desgastadas o rotas. Llame al Servicio al cliente de Crosman para obtener ayuda antes de volver a usar su pistola de aire suave.

C. PARA LIMPIAR EL CAÑÓN DEL ARMA DE AIRE SUAVE:

- Desactive el sistema hop-up del arma (sección 5).
- Rocíe una almohadilla de limpieza .22 con aceite Crosman Nitro Lubricant.

a diferentes distancias.

- Tire y sostenga la palanca de carga para abrir la cubierta de la boca de descarga.
- Gire el selector de ajuste del nivel de distancia en sentido horario para una mayor rotación, y en sentido antihorario para una menor rotación.

7. AJUSTE DE LA CULATA

- La pistola Airsoft se envía con la culata cerrada y es capaz de ajustarse a diferentes medidas.
- Antes de ajustar la culata, asegúrese de que la pistola Airsoft tenga el seguro activado ("ON SAFE") (consulte la Sección 2A) y esté apuntando hacia una DIRECCIÓN SEGURA.
- Presione la palanca liberadora de la culata y ajuste la culata hasta que trabe en la posición deseada.

8. APUNTAR Y DISPARAR DE FORMA SEGURA

A. DISPARAR DE FORMA SEGURA

- Usted y quienes lo acompañen deberán usar siempre la protección ocular diseñada para proteger los ojos al utilizar la pistola Airsoft.
- Siempre apunte su pistola Airsoft hacia una DIRECCIÓN SEGURA.
- No dispare hacia superficies duras o hacia la superficie del agua. Los perdigones BB de plástico pueden rebotar y golpear a alguien o algo que usted no tenía intención de golpear.
- NO vuelva a usar los perdigones de plástico ya disparados porque podrían dañar la pistola Airsoft.
- La pistola Airsoft está diseñada para tiro al blanco y es apta para uso en interiores y exteriores. Recuerde siempre colocar su blanco con cuidado. PIENSE en lo que podría impactar si no acierta al blanco.
- Cuando esté seguro del blanco y del respaldo, y el área alrededor del blanco esté despejada, cargue la pistola Airsoft siguiendo las instrucciones de las Secciones 3 y 4. Quite el seguro ("OFF SAFE") de la pistola Airsoft (Sección 2A), apunte y tire del gatillo para disparar.

B. AJUSTE DE LAS MIRAS

El alza puede ajustarse para resistencia aerodinámica.

- Use el selector ubicado en la parte lateral de la mira para que ésta se ajuste para la resistencia aerodinámica.
- Gire en sentido horario para mover el punto de impacto hacia la derecha.
- Gire en sentido antihorario para mover el punto de impacto hacia la izquierda.

La mira trasera cuenta con 2 aperturas diferentes. Para intercambiar las aperturas, pase de una a la otra.

9. MANTENIMIENTO DE LA PISTOLA AIRSOFT

- NO MODIFIQUE NI ALTERE SU PISTOLA AIRSOFT. Alterar su pistola Airsoft o intentar modificarla de alguna manera puede hacer inseguro su uso, puede causar lesiones graves o la muerte e invalidará la garantía.
- Si la pistola Airsoft se cae, revisela visualmente para verificar que funcione correctamente antes de volver a utilizarla. Si detecta algo diferente, por ejemplo, el gatillo está más corto o se dispara fácilmente, esto podría estar indicando que las piezas están desgastadas o dañadas. Llame al Centro de atención al cliente de Crosman para obtener asistencia antes de volver a usar la pistola Airsoft.

10. SOLUCIÓN DE PROBLEMAS/AUMENTO DE LA DIVERSIÓN AL DISPARAR

- Ocasionalmente, sacuda la pistola para asegurarse de que los perdigones BB se carguen sin complicaciones.
- Este es un rifle Airsoft de alta precisión. Evite el ingreso de polvo y suciedad dentro del cargador para ayudar a mantener el rendimiento del rifle Airsoft.
- Si la eficiencia de la carga de los perdigones BB parece disminuir, quite todos los perdigones BB del cargador y rocíelos con aceite de silicona durante 1 o 2 segundos. (Tenga en cuenta que la operación de nivel de distancia [hop-up] puede tornarse inestable momentáneamente después de usar aceite de silicona).
- El motor de una pistola Airsoft nueva puede generar olor, lo cual es normal.
- Si la pistola Airsoft no dispara en modo semiautomático, siga las instrucciones de disparo seguro, coloque la pistola en modo automático y efectúe de 5 a 10 disparos antes de volver a colocarla en modo semiautomático.
- Cambie la batería si el ciclo de disparo se vuelve lento.
- Deje descansar la pistola Airsoft de 5 a 10 minutos después de disparar aproximadamente 500 perdigones BB.

ELIMINACIÓN DE UN ATASCO

Nunca mire dentro del cañón para ver si se eliminó un atasco.

1. Asegúrese de que el seguro de la pistola Airsoft esté activado ("ON SAFE") y de que la pistola apunte hacia una DIRECCIÓN SEGURA.
2. Retire el cargador.
3. Inserte el extremo más delgado de la baqueta de limpieza en el cañón, con el ángulo hacia la recámara (donde se conecta el cargador).
4. CUIDADOSA y suavemente aplique más presión hasta sacar el perdigón BB fuera de la recámara.
5. Vuelva a instalar el cargador y pruebe la pistola.

11. AJUSTE DEL MOTOR

El ajuste periódico del motor es requerido para mantener su arma de aire suave funcionando eficientemente.

Para ajustar el motor, asegure que la arma no está cargada con municiones, vea sección 4B Ponga la arma en la posición "SEGRO ACTIVADO". (Sec. 2A)

A. EL MOTOR FUNCIONA PERO LA ARMA NO DISPARA: ¿ESTÁ BLOQUEADO EL CAÑÓN DE LA ARMA?

- Introduzca una baqueta con extremo abusado dentro del cañón, el lado abusado orientado hacia la cámara de carga. Empuje la baqueta dentro del cañón para asegurarse que no hay municiones atoradas.

¿ESTÁ GIRANDO EL MOTOR?

- Ubique el tornillo en la base de la empuñadura y quitelo. Quite la empuñadura. Con una llave allen de 2.5 mm, gire el tornillo de ajuste 1/4 de vuelta en sentido contrario a las manecillas del reloj para aflojar la conexión del motor y los engranajes. Apriete el gatillo, si la arma no dispara repita el procedimiento hasta que la arma dispare correctamente.

B. EL MOTOR NO FUNCIONA: ¿ESTÁ CARGADA LA BATERÍA?

- Cargue la batería por un mínimo de 4 horas, un máximo de 6 horas para carga completa.

¿EL MOTOR AUN NO FUNCIONA CON LA BATERÍA CARGADA COMPLETAMENTE?