




Model 761XL Powermaster
 .177 Cal. BB Repeater/
 Single Shot .177 Cal.
 Pellet Rifle

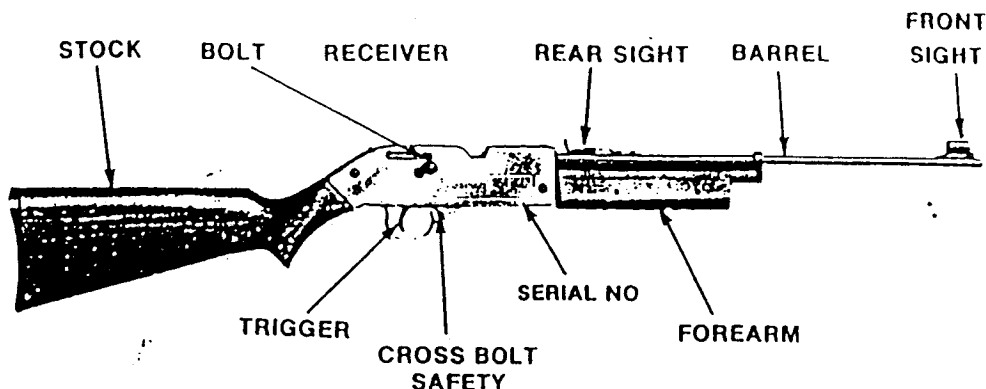

BE CAREFUL - BE A SAFESHOOTER

SPECIFICATIONS

Mechanism Bolt-action
 Caliber .177
 Ammunition .177 cal. Crosman Super
 Pellets® or Crosman Super
 BBs®
 Reservoir 180 BBs
 Magazine 18 BBs
 Weight 4 lbs. 9 oz. (2.1kg)
 Overall Length 36 in. (914mm)
 Sights: Rear Fully adjustable for elevation
 and windage
 Front Hooded type
 Barrel 19 in. (483mm), solid steel,
 button rifled, 10 lands, right-
 hand twist, one turn in 16 in.
 (405mm)
 Stock/Forearm Finished wood
 Power Source Short stroke, pneumatic
 pump action

PERFORMANCE

| Pumps | (Average) | Projectile | Weight |
|-------|-----------------|------------|----------|
| | Muzzle Velocity | | |
| 3 | 400 f.p.s. | .177 BB | 5.42 gr. |
| 6 | 500 f.p.s. | .177 BB | 5.42 gr. |
| 10 | 595 f.p.s. | .177 BB | 5.42 gr. |
| 3 | 380 f.p.s. | .177 Pell | 8.2 gr. |
| 6 | 470 f.p.s. | .177 Pell | 8.2 gr. |
| 10 | 540 f.p.s. | .177 Pell | 8.2 gr. |

HOW TO OPERATE

IMPORTANT: Steps for safe and satisfactory operation.

- Step 1 Put rifle "ON SAFE"
- Step 2 Pump rifle
- Step 3 Load rifle
- Step 4 Aim and Fire

CAUTION: THIS AIRGUN IS NOT A TOY AND MAY CAUSE DEATH OR SERIOUS INJURY, PARTICULARLY TO THE EYE, IF MISUSED OR USED CARELESSLY. READ ALL INSTRUCTIONS BEFORE USING THIS AIR GUN. THIS AIR GUN REQUIRES ADULT SUPERVISION IF THE USER IS

UNDER 16 YEARS OLD AND SHOULD NOT BE USED BY ANYONE UNDER 8 YEARS OF AGE. PURCHASER AND USER HAVE THE RESPONSIBILITY TO CONFORM TO ALL LAWS CONCERNING THE USE AND OWNERSHIP OF THIS AIR GUN.

BE CAREFUL - BE A SAFESHOOTER

Step 1 HOW TO PUT RIFLE "ON SAFE"

This rifle has a Cross-Bolt Safety. Push from the left side: it will stop your Trigger from moving. Safe and Fire are clearly marked on the sides of the Trigger Guard, see (Fig. 1).

CAUTION: It is your duty to keep the rifle on "Safe" at all times until you are ready to shoot, then put safety in "off" position.

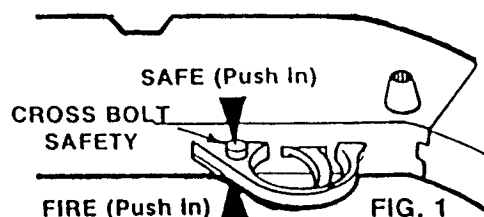


FIG. 1

Step 2 HOW TO PUMP RIFLE

See (Fig. 2) for correct way to pump your rifle.

CAUTION: Velocity produced by more than 10 pumps is only minor and can cause damage to the pump mechanism. Do Not pump your rifle more than 10 times.

Warning: Do Not shoot rifle with less than two (2) pumps. If you do, you will jam your gun.

CAUTION: Avoid pinching hand between Pumping Lever and Tube

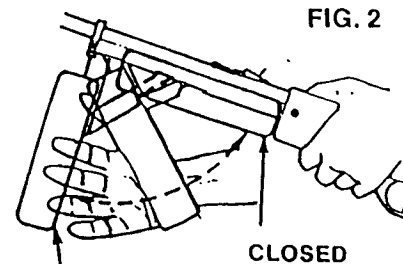


FIG. 2

Step 3 HOW TO LOAD YOUR 761XL RIFLE WITH BBs:

Put gun "ON SAFE".

- A. Rotate the Loading Port Cover to the right and fill Reservoir with 180 BBs (Fig. 3). Close cover to the left.
- B. To transfer BBs from Reservoir to Visual Magazine, grip rifle as illustrated in Fig. 4, move the BB Retainer Button rearward with thumb, then with a hand twisting motion BBs will flow into Visual Magazine. When the Visual Magazine is filled move the BB Retainer Button forward.


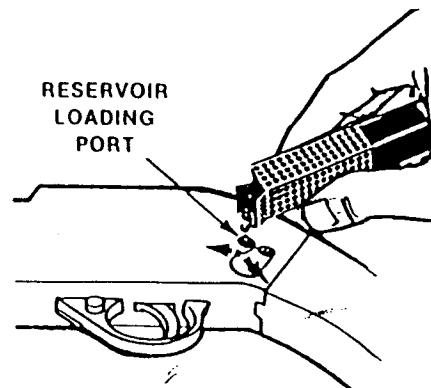


FIG. 3

WARNING: Pellets should never be put into the BB Loading Port. They will jam your rifle.

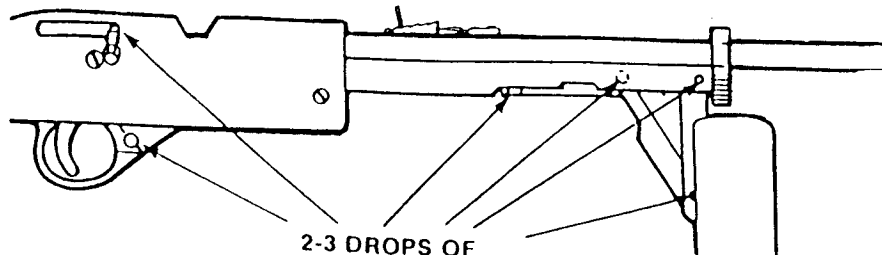

2-3 DROPS OF
PELLGUNOIL® HERE
AFTER 250 SHOTS

Fig. 10.

LUBRICATION

Follow these simple instructions to insure the long life of your rifle. After every 250 shots apply 2 or 3 drops of Crosman PELLGUNOIL to the Pump Cup and Piston Assembly (Fig. 10).

It is not necessary to clean the Barrel Bore, but the occasional application of a

little PELLGUNOIL is recommended to prevent the Barrel from rusting. Crosman PELLGUNOIL is recommended. Use only 2-3 drops. PELLGUNOIL is best, but any household oil is better than no oil at all. This is very important.

CAUTION

You must do the following things to insure safe and satisfactory performance of your gun.

- DON'T forget to treat every gun as if it were loaded.
- DON'T point the rifle in an unsafe direction.
- DON'T use your rifle without due respect for yourself, and other people.
- DON'T shoot at the target until you are sure of your backstop.
- DON'T conduct yourself in an un-sportsmanlike manner when using your rifle.
- DON'T store your rifle loaded.
- DON'T shoot your rifle with less than 2 pumps.
- DON'T reuse ammunition that has already been fired.
- DON'T alter or adjust any of the factory settings to your rifle.
- DON'T pump the gun while your finger is on the Trigger.
- DON'T forget to check Safety Bolt before loading and pumping.
- DON'T over pump your rifle (more than 10 pumps).

BE CAREFUL - BE A SAFESHOOTER

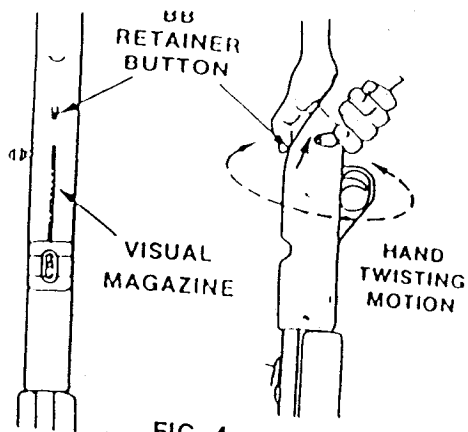


FIG. 4

C. To empty the Visual Magazine, hold the rifle straight up. Move the BB Retainer Button rearward with thumb, then with a hand twisting motion BBs will flow back into Reservoir. Make sure Visual Magazine is empty before moving BB Retainer Button forward.

Step 4 HOW TO AIM AND FIRE

Put the gun "ON SAFE", point the rifle slightly downward. Lift the Bolt and pull it back fully. Push the Bolt forward and down to lock (Fig. 6). The Magnetic Bolt picks a BB from the Visual Magazine and transfers it into the Barrel Chamber.

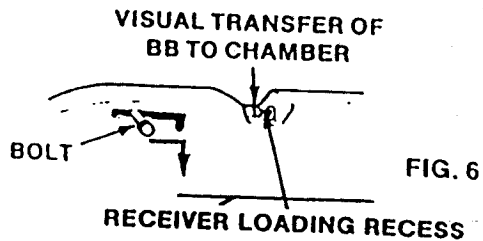


FIG. 6

Take aim, push "OFF SAFE" and squeeze the Trigger to fire.

CAUTION: Never attempt to discharge rifle with Bolt in unlocked position.

HOW TO SIGHT IN RIFLE

The rifle is correctly aimed when the blade of the Front Sight is positioned exactly in the notch of the Rear Sight, and the top of the Front Sight is flush with the top of the Rear Sight. For target shooting, many marksmen prefer to

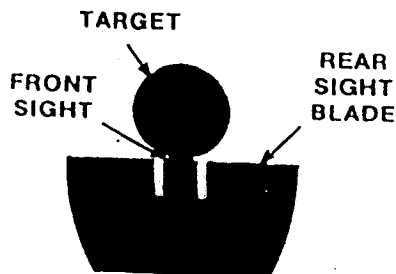


FIG. 8

How To Load Your 761XL Rifle with Pellets:

- Put gun "ON SAFE"
- To prevent Barrel jamming, all BBs must be removed from Visual Magazine. See Step 3 Section C (Fig. 4)

To load a SUPER PELL, lift the Bolt and pull it back fully. Place SUPER PELL, nose forward in the Receiver Loading Recess (Fig. 5) Push the Bolt forward and down to lock.

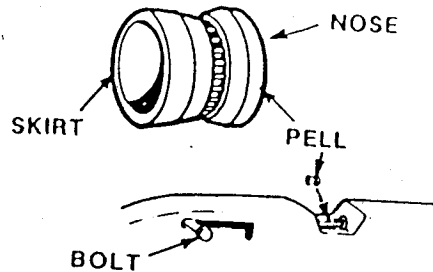


FIG. 5

How to Remove a Jammed Pellet or BB

CAUTION: Do Not Reload. Put gun "ON SAFE" unload all the BBs from Visual Magazine into Reservoir. Pump gun ten times, cock gun by operating Bolt (see step 4) take gun "OFF SAFE" point in Safe direction and fire. If gun remains jammed do the following:

- Operate Bolt and leave open.
- Insert a straightened clothes hanger or metal rod into Muzzle end of Barrel.
- Carefully push the jammed BB or Pellet out into the Receiver Loading Recess and discard. (Fig. 7).

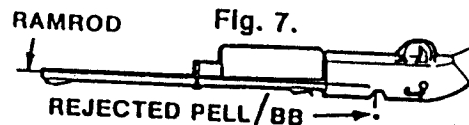


Fig. 7.

IMPORTANT: If unable to unjam gun see REPAIR SERVICE section of this manual.

sight-in at the bottom of the bull's eye (the 6 o'clock position) (Fig. 8). The sights will then appear black against the white of the target. The point of impact, however, will be the center of the bull's eye.

The Rear Sight may be adjusted for Elevation and if necessary, Windage. (Fig. 9).

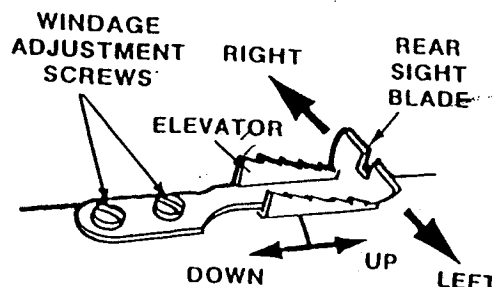


FIG. 9